



## Structural features of the circuit breaker

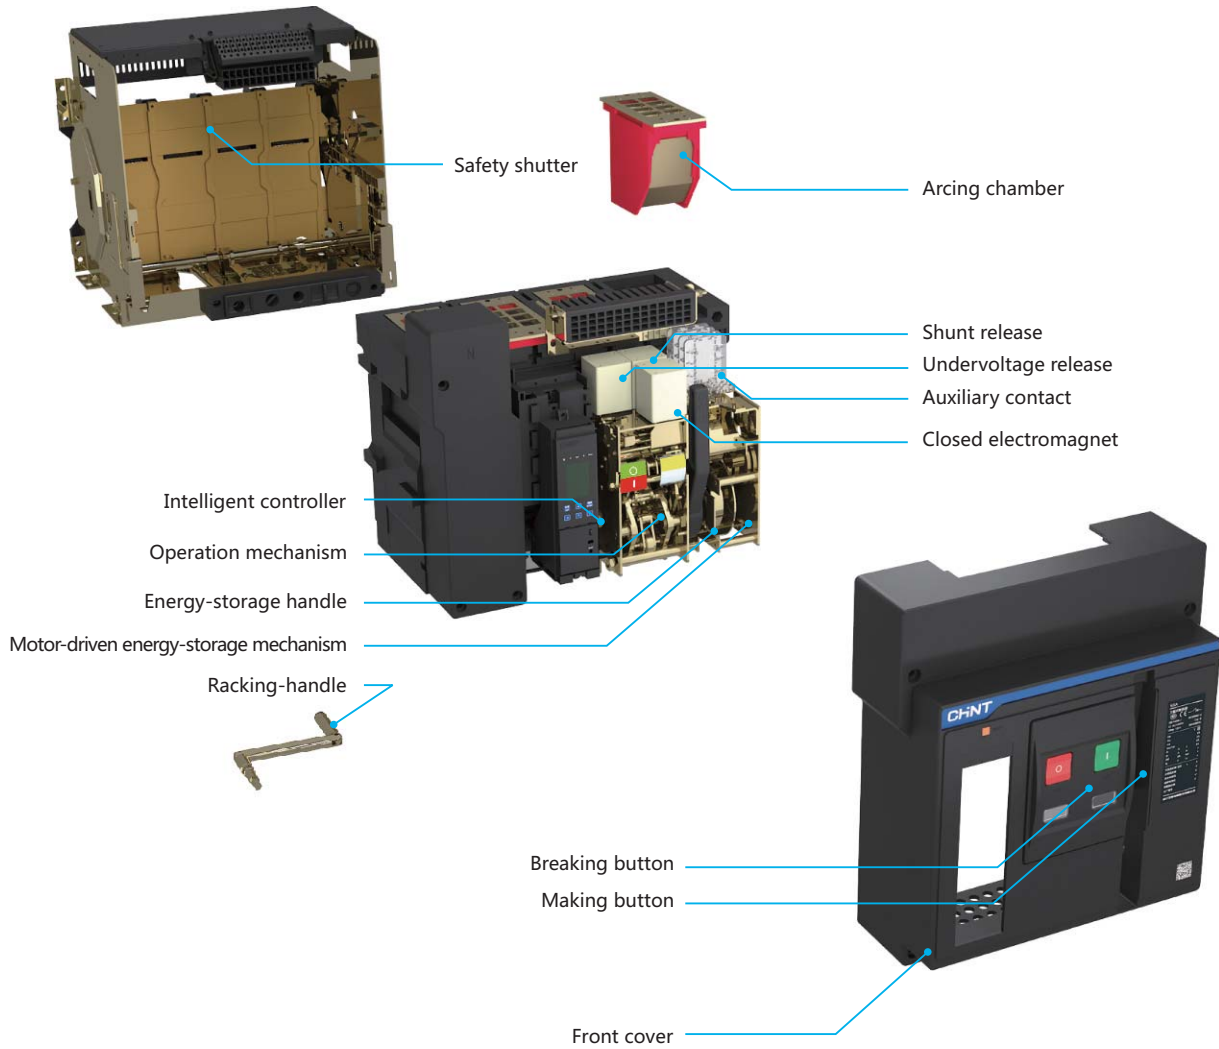

## Circuit breaker description

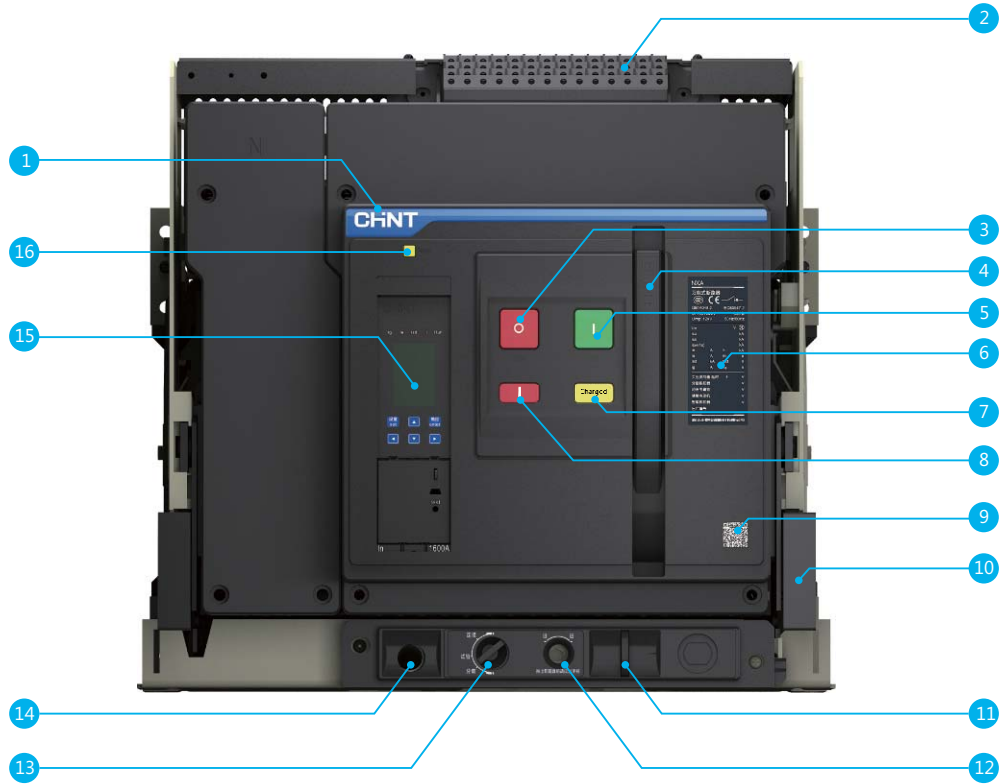

- |                                    |   |
|------------------------------------|---|
| 1 Trademark                        | 9 QR code   |
| 2 Secondary wiring terminal        | 10 Extraction draw plate (only applicable to draw-out type)           |
| 3 Breaking button                  | 11 "Disconnected" position locking (only applicable to draw-out type) |
| 4 Energy-storage handle            | 12 Racking-handle entry (only applicable to draw-out type)            |
| 5 Making button                    | 13 Position indication (only applicable to draw-out type)             |
| 6 Nameplate                        | 14 Racking-handle storage (only applicable to draw-out type)          |
| 7 Energy-storage/release indicator | 15 Intelligent controller   |
| 8 Breaking/making indicator        | 16 Fault-breaking indicator reset button                              |





### Circuit breaker

- Frame size (A): 1600, 2000, 3200, 4000
- Breaking capacity: N,S,H
- Rated operational voltage  $U_e$  (VAC): 380/400/415
- Number of poles: 3P, 4P
- Installation method: draw-out type, fixed type
- Wiring type: horizontal rear connection

### Operation conditions and environment adaptability

- Operation temperature:
  - The electrical and mechanical characteristics are applicable to the ambient temperature of  $-5^{\circ}\text{C}$ - $+40^{\circ}\text{C}$ . NXA can also operate in the ambient temperature of  $-45^{\circ}\text{C}$ - $+70^{\circ}\text{C}$  (M type, A type),  $-20^{\circ}\text{C}$ - $+70^{\circ}\text{C}$  (P type, H type, CD-1), the derating factor is seen in P21-22.
- Storage conditions: apply to  $-45^{\circ}\text{C}$ - $70^{\circ}\text{C}$
- NXA can resist the following electromagnetic interference
  - Overvoltage generated by electromagnetic interference
  - Overvoltage caused by environment interference or a power distributing system
  - Electrostatic discharge of radio waves (radio, intercom, radar and the like)
- The NXA circuit breaker has successfully passed the test for electromagnetic compatibility specified according to the following standards (EMC) IEC/EN 60947-2 Annex F
  - The test can guarantee no false tripping and no interference on tripping time
- Protection grade:
  - Front IP 20, other side IP 00

### Intelligent controller

- M type (basic type)
  - Basic function: Current measurement and display, protective function L S I&G
- A type (current type)
  - Comprising all protective functions of M type
  - Unbalanced current protection
- P type (power type)
  - Basic function, protective function: L, S, I&G
  - Power measurement functions of current, voltage, power etc.
  - LCD display
- H type (harmonic type)
  - Comprising all protection and measurement functions of P type
  - Harmonic measurement and analysis
  - Communication function



### Connection

- Rear connection
  - Horizontal connection
- Optional accessories
  - Interphase barrier

### Lock

- Padlocks of "Making" and "Breaking" push button
- Position padlock (for locking the circuit breaker at disconnected position)
- Chassis padlock
- Door interlock: the circuit breaker is arranged at the connected or test part so as to prohibit to open the door

### Indication contact

- Standard contact
  - Making and breaking indication contacts
  - Fault tripping indication contact
  - Spring charged indication contact
- Optional accessories
  - Position indication contact

### Remote operation

- Standard accessories
  - Electric operating mechanism
  - Closing electromagnet CC
  - Shunt release ST
- Optional accessories
  - Standard undervoltage release: UVT
  - UVT delay unit: UVTD


### Source-changeover systems

- Mechanical interlock
  - 1 normal and 1 replacement
  - 2 incoming and 1 busbar
- Source-changeover controller (with adaptor)
  - 1 normal and 1 replacement: mechanical interlock+2A type controller
  - 2 incoming and 1 busbar: mechanical interlock+3A type controller

**NXA series air circuit breaker**


Frame size	Breaking capacity	Rated current											
		400	630	800	1000	1250	1600	2000	2500	3200	3600	4000	
1600A	N	■	■	■	■	■	■						
	H	■	■	■	■	■	■						
2000A	N		■	■	■	■	■	■					
	H		■	■	■	■	■	■					
3200A	N							■	■	■			
	H							■	■	■			
4000A	N										■	■	■
	H										■	■	■

**Model definition and description**

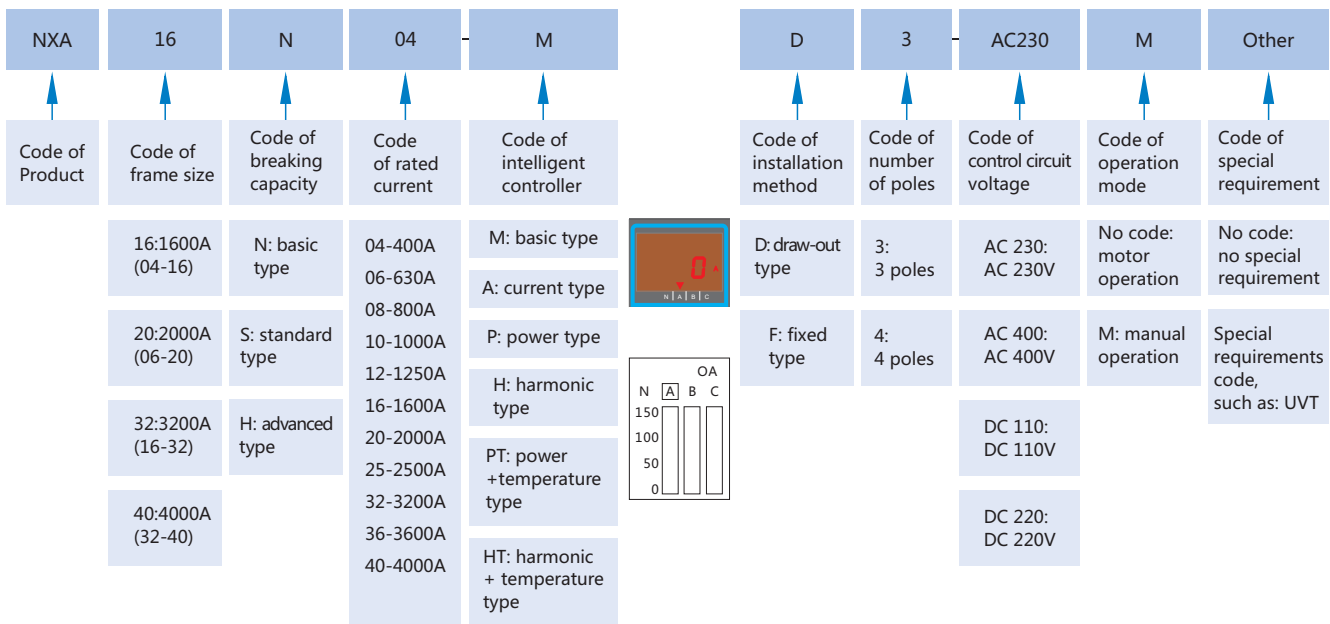

- <sup>1)</sup> Intelligent controller PT/HT type. The basic functions are the same with P/H type. T refers to the internal temperature measurement function.
- <sup>2)</sup> Manual operation does not contain motor-driven mechanism, closing electromagnet and shunt release. Motor operation contains all standard accessories of remote operation.
- <sup>3)</sup> Auxiliary working voltage of the intelligent controller: corresponding power modules is required if DC220V or DC110V is selected.
- <sup>4)</sup> NXA16N10-AD3-AC230: frame size is 1600A, N type breaking capacity, rated current is 1000A, A type intelligent controller, draw-out type and 3 poles, control voltage is AC 230V motor operation.

**Model definition and description-intelligent controller**

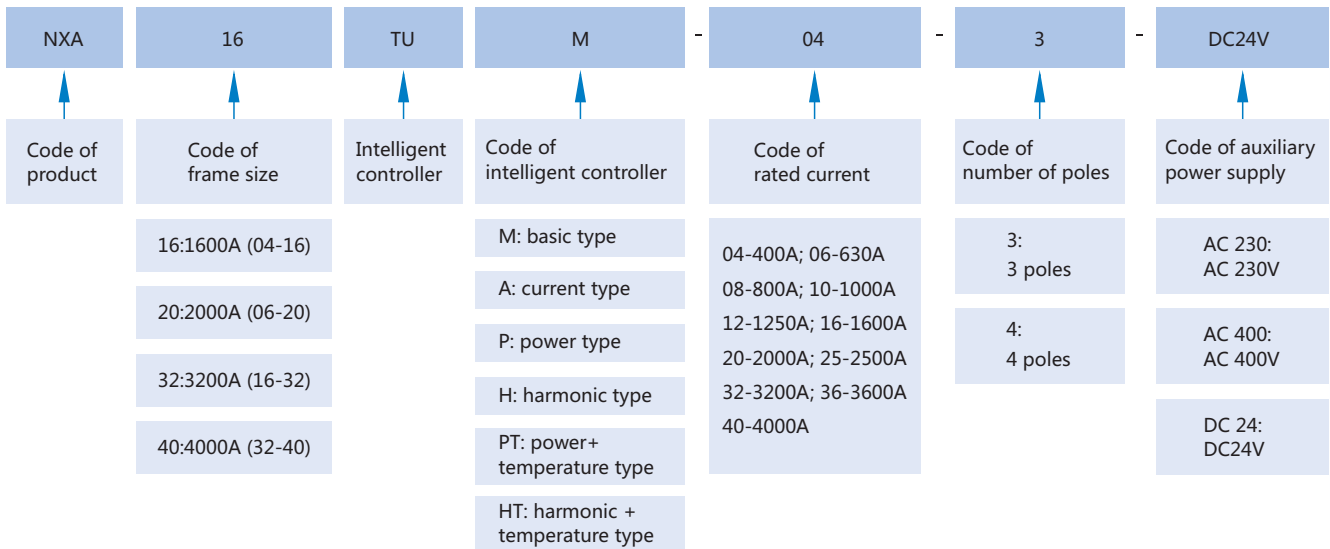



### Model definition and description-accessories

NXA	16	-	CC	-	230VAC
↑	↑		↑		↑
Code of product	Frame size		Code of accessories		Code of rated voltage
	16:1600A		CC: Closed electromagnet		230VAC: AC230V
	20:2000A		ST: Shunt tripper		400VAC: AC400V
	32:3200A		UVT: Undervoltage tripper		110VDC: DC110V
	40:4000A		MO: Motor		220VDC: DC220V
	20/40:2000A-4000A		UVTD:UVT delay unit		
	20/32:2000A-3200A				

### Model definition and description-accessories

NXA	16	OF	-	C04
↑	↑	↑		↑
Code of product	Frame size	Code of accessories		Specification of accessories
	16:1600A	OF: Auxiliary contact		C04: Four groups of contacts
	20:2000A			C05: Five groups of contacts
	32:3200A			C06: Six groups of contacts
	40:4000A			N3: Three normally open and three normally closed
	20/40:2000A-4000A			N4: Four normally open and four normally closed
	20/32:2000A-3200A			N5: Five normally open and five normally closed
				1S1S: One lock and one key
		KL: Key lock		2S1S: Two locks and one key
				3S2S: Three locks and two keys
		FCDP: Fixed type door frame		
		DCDP: Draw-out type door frame		
		FD: Fixed type interphased partition		
		DD: Draw-out type interphased partition		
		CE-CD-CT: Position signal		
		ILK2: Mechanical interlocking two interlocking steel cables		

## Technical Parameters

### Features

Number of poles	3/4	
Rated operational voltage Ue (V)	380/400/415	
Rated insulation voltage Ui (V)	1000	
Rated impulse withstand voltage Uimp (kV)	12	
Rated frequency Hz	50/60	
Flashover distance (mm)	0	
Applicable to isolation	IEC/EN 60947-2	Applicable
Pollution grade	IEC 60664-1	N:3

### Frame size

Rated current (A)	
Rated current of the fourth pole (A)	

### Type of the circuit breaker

Rated ultimate short circuit breaking capacity (kA rms) VAC 50/60Hz	Icu	380/400/415V
Rated service short circuit breaking capacity (kA rms) VAC 50/60Hz	Ics	380/400/415V
Utilization category		
Rated short-time withstand current (kA rms) VAC 50/60Hz	Icw	1s, 380/400/415V
Closed capacity (kA peak) VAC 50/60Hz	Icm	380/400/415V
Making current tripping protection function (MCR kA rms)		
Breaking time (ms)		
Closing time (ms)		

### Installation, connection and service life

Service life C/O cycle	Mechanical	Without maintenance
	Electrical	Without maintenance
Connection	Horizontal	
Size (width × depth × height)	Fixed type	3P
		4P
	Draw-out type	3P
		4P





			1600A				2000A				3200A				4000A				
	400	630	800	1000	1250	1600	630	800	1000	1250	1600	2000	1600	2000	2500	3200	3200	3600	4000
	400	630	800	1000	1250	1600	630	800	1000	1250	1600	2000	1600	2000	2500	3200	3200	3600	4000
			N	S	H		N	S	H		N	S	H		N	S	H		
	50	42	55			80	65	80			80	80	100		80	85	100		
	30	42	42			50	65	65			65	80	80		65	85	85		
	B			B			B			B			B						
	30	42	42			50	65	65			65	80	80		65	85	85		
	105	88.2	121			176	143	176			176	176	220		176	187	220		
	10	16	16			16	16	16			26	26	26		26	26	26		
	32			32			32			32			32						
	70			70			70			70			70						
	15000			15000			15000			10000			10000						
	8000			8000			8000			7000			3000						
	■			■			■			■			■						
	254×243.5×318.5			374×344×400			439×373.5×400			550×337.5×400									
	324×243.5×318.5			469×344×400			554×373.5×400			700×337.5×400									
	308×331.5×351			403×430×438.5			463×499.5×438.5			569×416×438.5									
	378×331.5×351			498×430×438.5			578×499.5×438.5			719×416×438.5									




## Intelligent Controller

### M type intelligent controller (Basic type)


#### Protection

All the protective threshold and time delay are set by a dial switch

- Overload protection
  - True RMS long-time-delay protection
  - Thermal memory: heat accumulation before and after tripping
- Short circuit protection
  - Short-time delay (RMS) and instantaneous protection
  - Optional four steps time-delay setting
- Earth fault protection
  - Optional four steps time-delay setting
- Neutral line overcurrent protection (4P)
  - The neutral protective threshold can be adjusted to 50%, 100% and OFF
- Test function
  - Simulating 6IR test current for test tripping
- Tripping record function
- Ampere meter
  - Measure the real and effective value (RMS) of current with the precision of 2% for 40% to 150% in setting

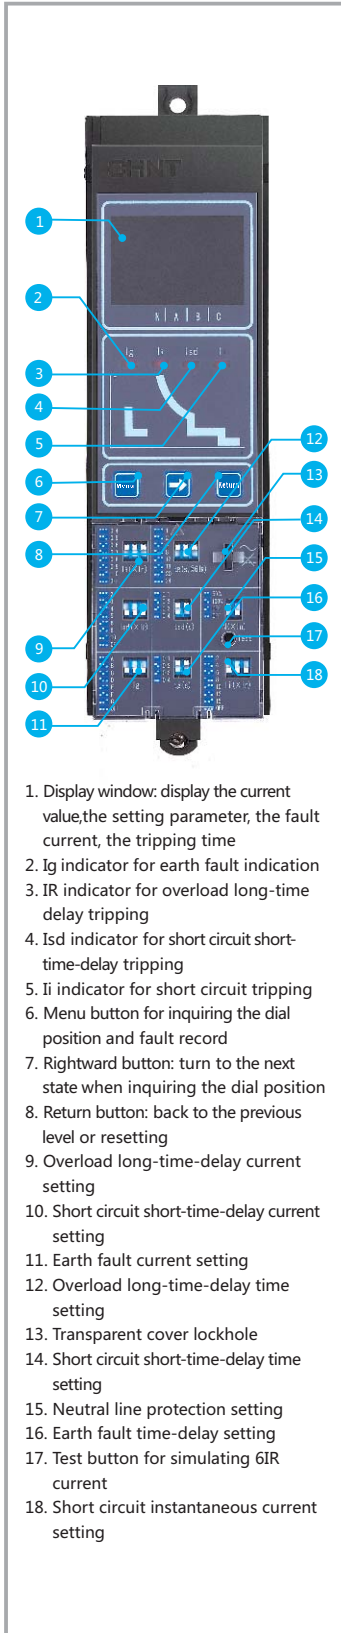

1. Display window: display the current value, the setting parameter, the fault current, the tripping time
2. Ig indicator for earth fault indication
3. IR indicator for overload long-time delay tripping
4. Isd indicator for short circuit short-time-delay tripping
5. Ii indicator for short circuit tripping
6. Menu button for inquiring the dial position and fault record
7. Rightward button: turn to the next state when inquiring the dial position
8. Return button: back to the previous level or resetting
9. Overload long-time-delay current setting
10. Short circuit short-time-delay current setting
11. Earth fault current setting
12. Overload long-time-delay time setting
13. Transparent cover lockhole
14. Short circuit short-time-delay time setting
15. Neutral line protection setting
16. Earth fault time-delay setting
17. Test button for simulating 6IR current
18. Short circuit instantaneous current setting

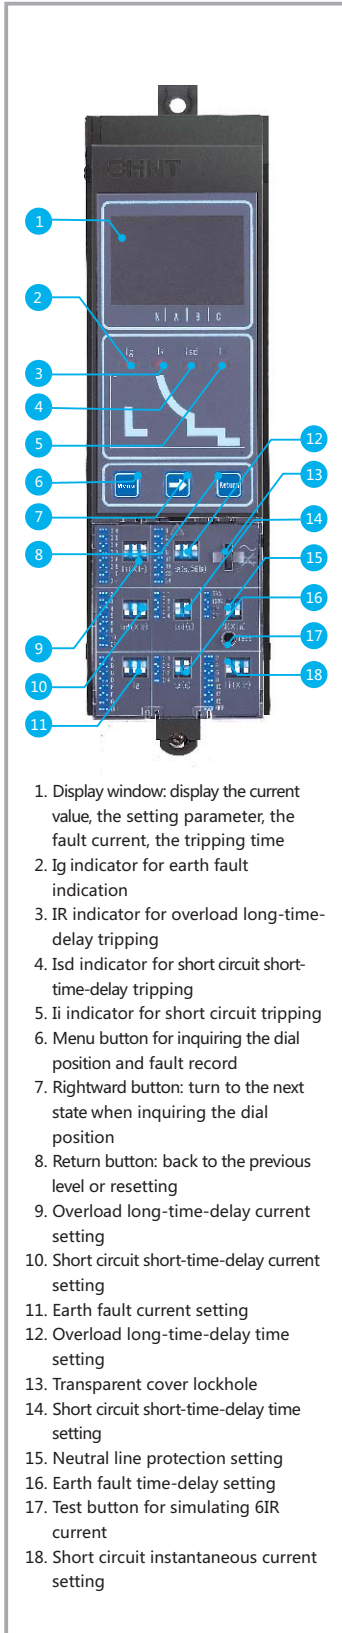


1. Display window: display the current value, the setting parameter, the fault current, the tripping time
2. Ig indicator for earth fault indication
3. IR indicator for overload long-time-delay tripping
4. Isd indicator for short circuit short-time-delay tripping
5. Ii indicator for short circuit tripping
6. Menu button for inquiring the dial position and fault record
7. Rightward button: turn to the next state when inquiring the dial position
8. Return button: back to the previous level or resetting
9. Overload long-time-delay current setting
10. Short circuit short-time-delay current setting
11. Earth fault current setting
12. Overload long-time-delay time setting
13. Transparent cover lockhole
14. Short circuit short-time-delay time setting
15. Neutral line protection setting
16. Earth fault time-delay setting
17. Test button for simulating 6IR current
18. Short circuit instantaneous current setting

### A type intelligent controller (Current type)

#### Protection

Setting all the protective threshold values and a dial switch for time delay. The setting values can be displayed on LCD display window.

- Overload protection
  - True RMS long-time-delay protection
  - Thermal memory: heat accumulation before and after tripping
  
- Short circuit protection
  - Short-time delay (RMS) and instantaneous protection
  - Optional four steps time-delay setting
  
- Earth fault protection
  - Optional four steps time-delay setting
  
- Neutral line overcurrent protection (4P)
  - The neutral protective threshold can be adjusted to 50%, 100% and OFF
  
- Unbalanced current protection
  - Protecting phase failure or three phase unbalance
  
- Test function
  - Simulating 6IR test current for test tripping
  
- Tripping record function
  
- Ampere meter
  - Measure the real and effective value (RMS) of current with the precision of 2% for 40% to 150% in setting

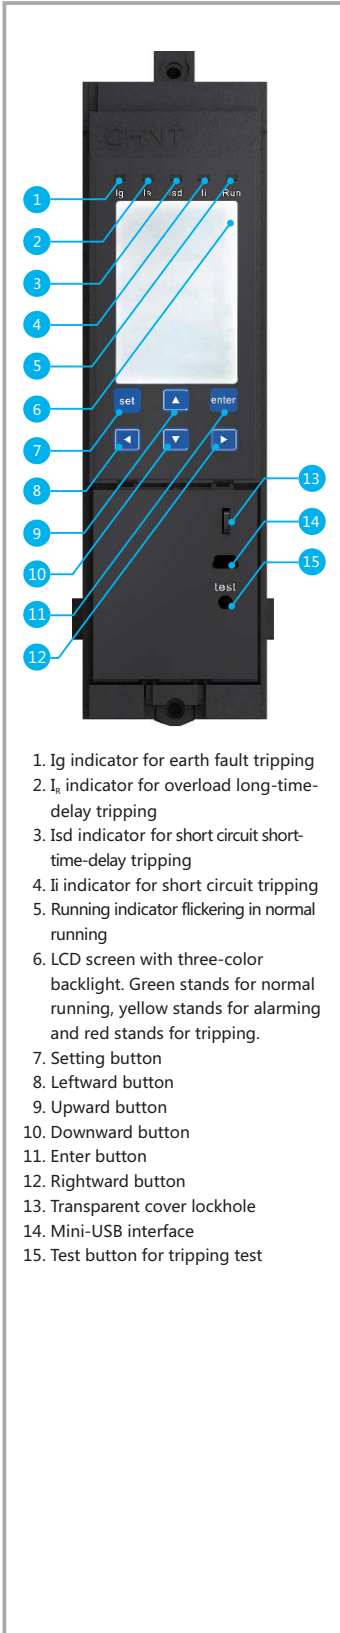

1. Ig indicator for earth fault tripping
2. Ir indicator for overload long-time-delay tripping
3. Isd indicator for short circuit short-time-delay tripping
4. Ii indicator for short circuit tripping
5. Running indicator flickering in normal running
6. LCD screen with three-color backlight. Green stands for normal running, yellow stands for alarming and red stands for tripping.
7. Setting button
8. Leftward button
9. Upward button
10. Downward button
11. Enter button
12. Rightward button
13. Transparent cover lockhole
14. Mini-USB interface
15. Test button for tripping test

### P type intelligent controller (Power type)


#### Protection

Setting all protective threshold values and time-delay

- Protection functions of all A type control units are included
- Earth current protection function (Optional)
  - External transformer and protection module are configured
- Advanced protection function
  - Unbalanced voltage protection
  - Overvoltage and undervoltage protection
  - Overfrequency and underfrequency protection
  - Phase sequence protection
  - Reverse power protection function
  - Required value protection function

The required value of the real and effective value of each current is calculated within a measurement window. When the required value is off limit, the protection action is carried out. The setting of a sliding time window is in the menu of "setting of a measurement meter".

- A-phase maximal required current value,
  - B-phase maximal required current value,
  - C-phase maximal required current value,
  - N-phase maximal required current value are respectively set for each circumstance of the required value protection without being affected by the setting of the neutral line protection.
- Extended function
    - Self-diagnosis by the intelligent controller
    - Operation times/fault tripping/alarming/deflection recording function provides the latest eight times of recording
    - Main contact abrasion display function for evaluating the contact abrasion degree according to mechanical life, electrical services and breaking capacities of different frames.
    - Internal clock function
    - A Mini-USB interface is connected with a PC to achieve the functions of protection setting, fault record downloading, whole power quantity detection and parameter reading of a circuit breaker.
    - "test" push button
  - Electric energy meter
    - Current measurement
    - Voltage measurement
    - Frequency measurement
    - Required value measurement
    - Power (active power, reactive power and apparent) measurement
    - Electric energy (active power, reactive power and apparent) measurement
    - Power factor measurement
  - Busbar temperature measurement (Optional)
    - The temperature of the busbar is measured by a temperature transformer in the busbar, and can be display on a LCD screen in real time. Customers can set the temperature threshold value and set the alarm.
  - LCD three-color backlight
    - Green stands for normal running, yellow stands for alarming and red stands for tripping.

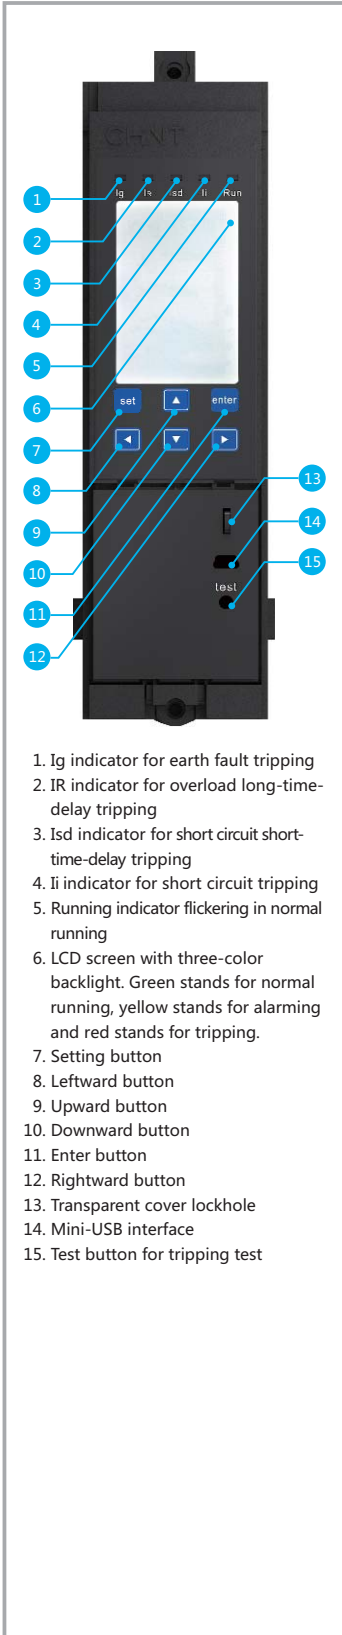

1. Ig indicator for earth fault tripping
2. IR indicator for overload long-time-delay tripping
3. Isd indicator for short circuit short-time-delay tripping
4. Ii indicator for short circuit tripping
5. Running indicator flickering in normal running
6. LCD screen with three-color backlight. Green stands for normal running, yellow stands for alarming and red stands for tripping.
7. Setting button
8. Leftward button
9. Upward button
10. Downward button
11. Enter button
12. Rightward button
13. Transparent cover lockhole
14. Mini-USB interface
15. Test button for tripping test

### H type intelligent controller (Harmonic wave type)

#### Protection

Setting all protective threshold values and a button for time-delay

Besides the protective extended function of all P type control units,

H type control unit also comprises:

- Load monitoring function
- Zone selective interlock (ZSI)
- Communication function
  - Modbus-RTU communication protocol
- Input/output function
  - 2DI, 2DO or 4DO
  - DI signal: AC230V ( Standard configuration, and others can be selected); AC400V; DC110V; DC220V; DC24V
  - DO needs to be configured with a power supply module (24VDC output) and a relay module.
- Harmonic analysis function
  - Measurement of the fundamental wave current, the fundamental wave line voltage, the fundamental wave phase voltage, the fundamental wave power and each 3-31 odd harmonic wave current percentage (HRIh), the harmonic voltage percentage (HRUh), the total harmonic wave current distortion rate (THDi, thdi) and the total harmonic wave voltage distortion rate (THDu, thdu).
  - The harmonic wave percentage(HR) refers to the ratio of root-mean-square value of the Nth harmonic wave component contained in periodic alternative current quantity to the root-mean-square value of the fundamental wave component, and is expressed in percentage.

## Protection Features

The protection features of the intelligent controller comprise inverse time characteristic and constant time characteristic. When the fault current exceeds the set value of the inverse time limit, the controller performs constant time protection. The inverse time limit corresponds to the feature curve  $I^2t$ .

### Overload long-time-delay protection feature

Overload long-time-delay protection action threshold value  
 < 1.05IR : > 2h, no action  
 > 1.3IR : < 1h, action

Ir current setting value range: 0.4In, 0.5 In, 0.6 In, 0.7 In, 0.8 In, 0.9 In, 1.0 In+OFF

Inverse time limit action feature:  $I^2t$ , wherein  $t=(6/N)^2 \cdot t_r$

Setting Multiple of Current	Action Time							
1.5I <sub>R</sub>	16	32	64	128	192	256	320	384
2I <sub>R</sub>	9	18	36	72	108	144	180	216
6I <sub>R</sub>	1	2	4	8	12	16	20	24

Note: N --- the multiple I/IR obtained by dividing failure current by set current  
 t --- time delay action of the failure action  
 t<sub>r</sub> --- long-time-delay set value  
 Allowed error of the action time ±15%

### Short circuit short-time-delay protection feature

Short circuit short-time-delay protection action threshold value  
 < 0.85Isd: no action  
 > 1.15Isd: action

Isd current set value range: 2I<sub>R</sub>, 3I<sub>R</sub>, 4 I<sub>R</sub>, 5I<sub>R</sub>, 6I<sub>R</sub>, 8I<sub>R</sub>, 10I<sub>R</sub> +OFF (MAX 50kA)

Current	Action time		Remark
Isd < I ≤ 10I <sub>R</sub>	Inverse time limit	Action feature $I^2t = (10I_R)^2 \cdot tsd$	P, H
		Setting time s 0.1, 0.2, 0.3, 0.4	
1 ≥ 1.1Isd	Constant time limit	Setting time s 0.1, 0.2, 0.3, 0.4	M, A, P, H
		Minimum s 0.06, 0.16, 0.255, 0.34	
	Maximum s 0.14, 0.24, 0.345, 0.46		
	Return time	0.05, 0.14, 0.25, 0.33	

Note: Isd---short-time-delay current set value  
 I--- failure current value  
 IR--- long-time-delay set value  
 t--- failure action time-delay time  
 tsd---short-time-delay inverse time limit set value  
 Permissible error of action time ±15%



### Short circuit instantaneous protection features

Short circuit instantaneous protection action threshold value

< 0.85I<sub>i</sub>: no action

> 1.15I<sub>i</sub>: action

The current setting value of instantaneous action: 2I<sub>n</sub>, 4I<sub>n</sub>, 6I<sub>n</sub>, 8I<sub>n</sub>, 10I<sub>n</sub>, 12I<sub>n</sub>, 15I<sub>n</sub>+OFF(NXA40 MAX50kA)

Note: action time ≤ 50ms

### Earth fault protection action features

Earth fault protection action threshold value

< 0.9I<sub>g</sub>: no action

> 1.1I<sub>g</sub>: action

Current setting value	A	B	C	D	E	F	G	OFF
NXA16, 20	0.2I <sub>n</sub>	0.3I <sub>n</sub>	0.4I <sub>n</sub>	0.5I <sub>n</sub>	0.6I <sub>n</sub>	0.8I <sub>n</sub>	I <sub>n</sub>	
NXA32, 40, 63	500A	640A	800A	960A	1040A	1120A	1200A	
<b>T<sub>g</sub>(s)</b>	<b>Inverse time limit</b>	<b>Action features</b>						

$$t = \frac{(I_g)^2}{I^2} \times t_g$$

Constant time limit	Setting time (s)	0.1	0.2	0.3	0.4
	Minimum (s)	0.06	0.16	0.255	0.34
	Maximal (s)	0.14	0.24	0.345	0.46
	Return time	0.05	0.14	0.25	0.33

Note: I<sub>g</sub> --- earth fault protection setting value. When I<sub>n</sub> ≥ 1250A, I<sub>g</sub> = 1200A. When I<sub>n</sub> < 1250A, I<sub>g</sub> = I<sub>n</sub>. When I<sub>n</sub> ≥ 1250A, I<sub>g</sub> MAX = 1200A

I --- failure current value

t --- failure action time-delay time

t<sub>g</sub> --- earthing inverse time limit set value

The permissible error of the inverse time limit action time: ±15%

## Measurement Precision Of The Intelligent Controller

Current measurement	
Measurement range	Ia, Ib, Ic and IN are not less than 15In (rated current of the circuit breaker)
Measurement precision	Below 0.1In: the measurement is inaccurate
	0.1In-0.4In: the accuracy will be changed linearly from 5% to 2%
	0.4In-1.5In: the accuracy is 2%
	> 1.5In: the accuracy will be changed linearly from 2% to 15%
The measurement accuracy of the earthing current is 10%	

Voltage measurement	
Measurement range	Line voltage: 0V~1300V
	Phase voltage: 0V~900V
Measurement precision	Error: ±1%

Frequency	
Measurement range	40HZ~70HZ
Measurement precision	Error: ± 0.1HZ

Power	
Measurement mode	The effective value mode
Measurement content	3P type: total active power, total reactive power and total apparent power
	4P type: phase splitting active power, phase splitting reactive power, phase splitting apparent power, total active power, total reactive power, total apparent power
Measurement power	Active power: -32768KW~ + 32767KW
	Reactive power: -32768Kvar~ + 32767Kvar
	Apparent power: 0KVA~65535KVA
	Error: ±2.5%

Power factor	
Measurement content	3P type: total power factor 4P type: phase splitting power factor
Measurement range	-1.00~+1.00

Electric energy	
Measurement content	Input reactive electric energy EQin, output reactive electric energy EQout Input active electric energy EPin, output active electric energy EPOut Total active electric energy EPTotal, total reactive electric energy EQtotal, total apparent electric energy ESTotal
Measurement range	Active electric energy: -32768KWh~ + 32767KWh Reactive electric energy: -32768Kvarh~ + 32767Kvarh Apparent electric energy: 0~65535KVAh
Measurement precision	Error ±2.5%

Harmonic wave measurement	
Fundamental wave measurement	Current: Ia, Ib, Ic Voltage: Uab, Ubc, Uca
Total harmonic wave distortion THDu and thdu	THD: the total distortion rate of the harmonic wave relatively to the fundamental wave Thd: the total distortion rate of the harmonic wave relatively to the effective value
Amplitude wave spectrum of harmonic wave	The controller can display FFT amplitude of odd harmonic wave from 3 to 31in percentage
Measurement precision of control unit	±2%







## Accessories: Locks

### Pushbutton lock

The pushbutton lock is to lock the circuit breaker by a transparent cover blocks so as to prevent the breaking button and the making button of the circuit breaker from misoperation and guarantee the reliable running of the circuit breaker.

### Body lock

- A key lock includes four types. The latter two are applied to 2 input and 1 connect power distribution system:
  - Random lock
  - One lock and one key
  - Two locks and one key
  - Three locks and two keys

### Safety shutters padlock

- The padlock is prepared by users. when a circuit breaker body is at the disconnected or test part, the safety shutters automatically block access to the disconnecting contact cluster.

### "Disconnected" position padlock

After the chassis and body are locked at "Disconnected" position by a padlock, the racking-handle cannot be inserted into racking-handle entry, and then the position of the body cannot be changed.

### Door interlock

- Circuit breaker state door interlock  
A cabinet door is prohibited to be opened when the circuit breaker is closed. The cabinet door is allowed to be opened when the circuit breaker is disconnected.
- Circuit breaker position door interlock  
The cabinet door is prohibited to be opened when the circuit breaker is at the connected and test part. The cabinet door is allowed to be opened when the circuit breaker is at the disconnected position.



## Accessories: Indication Contacts

ON/OFF indication contacts		
Standard configuration		4CO
Breaking capacity		Current (A) / Voltage (V)
Utilization category	VAC(AC-15)	1.3/240, 0.75/415
	VDC(DC-13)	0.55/220, 0.27/110

"Connected", "disconnected" and "test" position indication contact		
Standard configuration		1CO/3
Breaking capacity		Current (A) / Voltage (V)
Utilization category	VAC(AC-15)	1.3/240, 0.75/415
	VDC(DC-13)	0.55/220, 0.27/110


Alarming contact		
Standard configuration		1CO
Breaking capacity		Current (A) / Voltage (V)
Utilization category	VAC(AC-15)	1.3/240, 0.75/415
	VDC(DC-13)	0.55/220, 0.27/110

Spring charging indication contact		
Standard configuration		1NO
Breaking capacity		Current (A)/ Voltage (V)
Utilization category	VAC(AC-15)	1.3/240, 0.75/415
	VDC(DC-13)	0.55/220, 0.27/110

Note: <sup>1</sup> CO refers to a switch contact, and a one-normally-open and one-normally-closed contact is matched with a common terminal.

<sup>2</sup> NO refers to a normally open contact. NC refers to a normally closed contact.



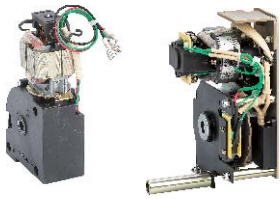

1600A frame MO 2000~4000A frame MO



1600A frame CC&ST



2000~4000A frame CC&ST

- Motor-driven mechanism (MO) (Standard configuration)  
When a circuit breaker is switched on, an motor operation mechanism stores energy automatically, so that when the circuit breaker is tripped, the device can switch on instantly. An energy-storage handle as spare when no auxiliary power supply is provided.

Characteristics		
Power supply	VAC 50/60HZ	220/230/240, 380/400/415
	VDC	110, 220
Operation threshold		0.85-1.1Us
Frame size: power loss (VA or W)		16: 75W; 20: 85W; 32: 110W; 40: 10W
Motor overcurrent		≤1min
Charging time		≤7s
Operation frequency		≤2times/min

- Voltage coils (CC &ST) (Standard configuration)
- Closing coil (CC)  
The CC closing coil remotely closes the circuit breaker if the spring mechanism is charged.
- Shunt release (ST)  
The ST release instantaneously opens the circuit breaker when energised.

Characteristics		CC	ST
Power supply	VAC 50/60HZ	220/230/240 380/400/415	220/230/240 380/400/415
	VDC	220, 110	220, 110
Operational voltage		0.85-1.1Us	0.7-1.1Us
Frame size: power loss (VA or W)	AC	16: 400VA; 20~40: 400VA	16: 400VA; 20~40: 400VA
	DC	16: 380W; 20~40: 130W	16: 380W; 20~40: 130W
Circuit breaker response time at Un		40ms-60ms	30ms-50ms



▪ Undervoltage release (UVT)

When the power supply voltage drops to be a value between 35%-70%, the release coil causes the circuit breaker to trip instantly. If there is no supply on the release, it is impossible to close the circuit breaker, either manually or electrically. Circuit breaker closing is enabled again when the supply voltage of the release returns to 85% of its rated value.

Characteristics			
Power supply	VAC 50/60HZ	220/230/240, 380/400/415	
	VDC	-	
Operation threshold	Open	0.35-0.7Ue	0.35-0.7Ue
	Closed	0.85Ue	0.85-1.1Ue
Frame size: power loss (W)			16: 220W/15W; 20~40: 220W/13W

Note: actuation/maintaining.

▪ UVT delay unit (UVT-D)

To eliminate the false tripping caused by short-time voltage drop, UVT action time delay is required. The function is realized by additionally increasing a time delay unit for UVT.

Characteristics			
Power supply	VAC 50/60HZ		
Operation threshold	Open	0.35-0.7Ue	
	Closed	0.85Ue	
Frame size: power loss (VA)			16: 20VA; 20~40: 48VA
Adjustable time			16: 0.5s, 1s, 2s, 3s, 5s; 20~40: 1s, 3s, 5s



# Capacity Derating And Power Loss

## Temperature capacity derating table of the fixed type circuit breaker

1600A frame

Ambient temperature	400A		630A		800A		1000A		1250A		1600A	
Connection mode	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical
40°	-	-	-	-	-	-	-	-	-	-	-	-
45°	-	-	-	-	-	-	-	-	-	-	-	-
50°	-	-	-	-	-	-	-	-	-	-	1550	1600
55°	-	-	-	-	-	-	-	-	1150	1200	1500	1550
60°	-	-	550	580	-	-	-	-	1050	1100	1450	1500

2000A frame

Ambient temperature	630A		800A		1000A		1250A		1600A		2000A	
Connection mode	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical
40°	-	-	-	-	-	-	-	-	-	-	-	-
45°	-	-	-	-	-	-	-	-	1550	-	1900	-
50°	-	-	-	-	-	-	-	-	1500	1550	1850	1900
55°	-	-	-	-	-	-	-	-	1400	1450	1800	1800
60°	-	-	-	-	-	-	-	-	1300	1350	1700	1700

3200A frame

Ambient temperature	1600A		2000A		2500A		3200A	
Connection mode	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical
40°	-	-	-	-	-	-	-	-
45°	-	-	-	-	-	-	-	-
50°	-	-	-	-	-	-	3100	-
55°	-	-	-	-	2450	-	3000	3050
60°	-	-	-	-	2350	2400	2900	2950

4000A frame

Ambient temperature	3200A		3600A		4000A	
Connection mode	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical
40°	-	-	-	-	-	-
45°	3100	-	-	-	3800	3850
50°	3000	-	-	-	3600	3650
55°	3000	3050	3400	3450	3400	3450
60°	2900	2900	3200	3250	3200	3250

Note: “-” refers to no capacity derating.



### Temperature capacity derating table of the draw-out type circuit breaker

#### 1600A frame

Ambient temperature	400A		630A		800A		1000A		1250A		1600A	
	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical
40°	-	-	-	-	-	-	-	-	-	-	-	-
45°	-	-	-	-	-	-	-	-	-	-	1550	-
50°	-	-	-	-	-	-	-	-	1150	1200	1500	1550
55°	-	-	550	580	-	-	-	-	1050	1100	1450	1500
60°	-	-	500	530	-	-	950	-	950	1000	1400	1450

#### 2000A frame

Ambient temperature	630A		800A		1000A		1250A		1600A		2000A	
	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical
40°	-	-	-	-	-	-	-	-	-	-	-	-
45°	-	-	-	-	-	-	-	-	1500	-	1850	1900
50°	-	-	-	-	-	-	-	-	1400	1500	1750	1850
55°	-	-	-	-	-	-	-	-	1300	1400	1650	1750
60°	600	-	-	-	-	-	1200	-	1200	1300	1550	1650

#### 3200A frame

Ambient temperature	1600A		2000A		2500A		3200A	
	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical
40°	-	-	-	-	-	-	-	-
45°	-	-	-	-	2450	-	3100	-
50°	-	-	-	-	2400	2450	3000	3100
55°	-	-	-	-	2350	2400	2900	3000
60°	-	-	-	-	2300	2350	2800	2900

#### 4000A frame

Ambient temperature	3200A		3600A		4000A	
	Horizontal	Vertical	Horizontal	Vertical	Horizontal	Vertical
40°	-	-	-	-	-	-
45°	3100	-	-	-	3800	3850
50°	3000	3100	-	-	3600	3650
55°	2900	3000	3400	3450	3400	3450
60°	2800	2900	3200	3250	3200	3250

### Altitude capacity derating factor

Altitude height (m)		2000	3000	4000	5000
Rated impulse withstand voltage (kV)	Uimp	12	10	8.57	7.5
Average insulation grade (V)	Ui	1000	833	714	625
Maximal operational voltage (V) 50/60HZ	Ue	415	415	415	415
Average heat operational current(40)°C		1.0	0.97	0.93	0.89

### Power loss and input and output resistance

Power loss is the power loss of each pole measured at In, 50/60Hz. The input/output resistance is the DC resistance value of each pole at the cold state.

Frame size	Rated current (A)	Draw-out type		Fixed type (W)	
		Power loss (W)	Input/output resistance (μohm)	Power loss (W)	Input/output resistance (μohm)
1600A	400	25.6	63.6	13.0	32.4
	630	63.6	63.6	32.4	32.4
	800	83.3	51.6	45.5	28.2
	1000	130.1	51.6	71.1	28.2
	1250	203.4	51.6	111.1	28.2
	1600	404.7	34.2	213.0	18.0
2000A	630	64.9	49.2	29.3	22.2
	800	104.7	49.2	47.3	22.2
	1000	163.6	49.2	73.8	22.2
	1250	199.56	38.4	99.2	19.1
	1600	326.95	38.4	162.5	19.1
	2000	431.0	32.4	226.7	17.0
3200A	1600	233.2	16.6	110.2	7.8
	2000	364.3	16.6	172.1	7.8
	2500	569.3	16.6	269.0	7.8
	3200	878.6	15.6	378.5	6.8
4000A	3200	625.3	14.1	344.4	7.8
	3600	992.6	17.7	392.3	7.0
	4000	1225.44	17.7	484.3	7.0

# Dimension Of Busbar

## Bolt configuration

Type of bolt	Application	Fastening busbar
16: M10	Fastening busbar	(49~59)N.m
20~63: M12	Fastening busbar	(86~103)N.m
16~63 : M3	Fastening secondary connector	(0.5~0.7)N.m

## Hole size and installation twisting moment of busbar

DrillingΦ ( mm )	Diameter of bolt	Fastening twisting moment
16:Φ11	M10	(49~59)N.m
20~63:Φ13	M12	(86~103)N.m

## Connection busbar specification reference under different temperature

Maximum permissible temperature of busbar: 100°C

The material of busbar is bare copper

Frame size	Rated current (A)	Ambient temperature(-5~40)°C				Ambient temperature 50°C				Ambient temperature 60°C			
		5mm thick busbar		10mm thick busbar		5mm thick busbar		10mm thick busbar		5mm thick busbar		10mm thick busbar	
		Number of pieces	Specification	Number of pieces	Specification	Number of pieces	Specification	Number of pieces	Specification	Number of pieces	Specification	Number of pieces	Specification
1600A	400	2	30*5	1	30*10	2	30*5	1	30*10	2	30*5	1	30*10
	630	2	40*5	1	40*10	2	40*5	1	40*10	2	40*5	1	40*10
	800	2	50*5	1	50*10	2	50*5	1	50*10	2	50*5	1	50*10
	1000	3	50*5	2	40*10	3	50*5	2	40*10	3	50*5	2	40*10
	1250	4	40*5	2	40*10	4	50*5	2	50*10	4	50*5	2	50*10
	1600	4	50*5	2	50*10	4	50*5	2	50*10	4	50*5	2	50*10
2000A	630	2	40*5	1	40*10	2	50*5	1	50*10	2	60*5	1	60*10
	800	2	50*5	1	50*10	2	50*5	1	50*10	2	60*5	1	60*10
	1000	3	50*5	2	40*10	3	50*5	2	40*10	3	60*5	2	50*10
	1250	3	60*5	2	50*10	3	60*5	2	50*10	3	60*5	2	50*10
	1600	4	60*5	2	60*10	4	60*5	2	60*10	4	60*5	2	60*10
	2000	6	60*5	3	60*10	6	60*5	3	60*10	6	60*5	3	60*10
3200A	1600	2	100*5	1	100*10	2	100*5	1	100*10	2	100*5	1	100*10
	2000	4	100*5	2	100*10	4	100*5	2	100*10	4	100*5	2	100*10
	2500	4	100*5	2	100*10	4	100*5	2	100*10	4	100*5	2	100*10
	3200	8	100*5	4	100*10	8	100*5	4	100*10	8	100*5	4	100*10
4000A	3200	8	100*5	4	100*10	8	100*5	4	100*10	8	100*5	4	100*10
	3600	7	120*5	3	120*12	7	120*5	3	120*12	7	120*5	3	120*12
	4000	8	120*5	4	120*10	8	125*5	4	125*10	8	125*5	4	125*10

Note: a. When a copper bar selected by users is not matched with a wiring terminal of the circuit breaker, extended busbar is required to be designed to transfer, and is designed by the users of their own. The cross section of the extended busbar cannot be less than the requirement in the table above. The interval among the extended busbar is not less than the interval among wiring terminals of the circuit breaker.

- b. After the busbar recommended in the table above is installed, the electric clearance between adjacent phases of the circuit breaker is not less than 18mm.
- c. Electrical elements are used for three-phase rectification and high-frequency inversion, such as a high-frequency induction heating furnace (medium-frequency furnace steelmaking equipment), a solid high-frequency welding machine (such as an embedded arc electric welding machine), vacuum heating smelting equipment (such as a monocrystalline silicon growth furnace), in load equipment by controlled silicon. When a circuit breaker is selected, the influence on the circuit breaker by higher order harmonic component generated by controlled silicon is required to be considered besides the influences by the environment temperature and altitude height. At the same time, capacity derating is required, and the capacity coefficient (0.5-0.8) is recommended.
- d. The electric clearance of fastening bolts of upper and lower busbar needs to be not less than 20mm after the installation of the busbar by users.
- e. After the installation of the circuit breaker, the safety clearance among electrified bodies with different electric potential and between the electrified bodies and the ground are not less than 18mm.







# Dimensions And Installation

1600A fixed type

Front view

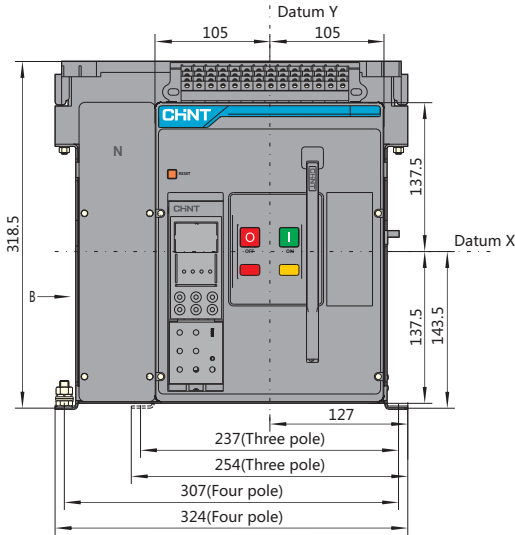


Side view

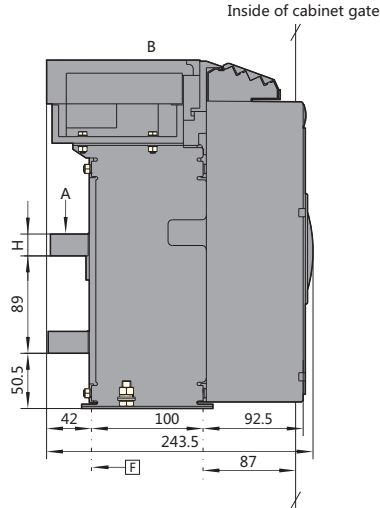

## Hole size


Hole size of the base

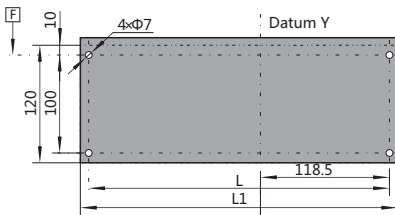

Schematic diagram of the overall size of the bottom surface and the installation hole pitch

H	L	L1	Remark
5	237	254	In=400A~630A Fixed type, three pole
8	237	254	In=800A~1250A Fixed type, three pole
20	237	254	In=1600A Fixed type, three pole
5	307	324	In=400A~630A Fixed type, four pole
8	307	324	In=800A~1250A Fixed type, four pole
20	307	324	In=1600A Fixed type, four pole


Hole size of a panel

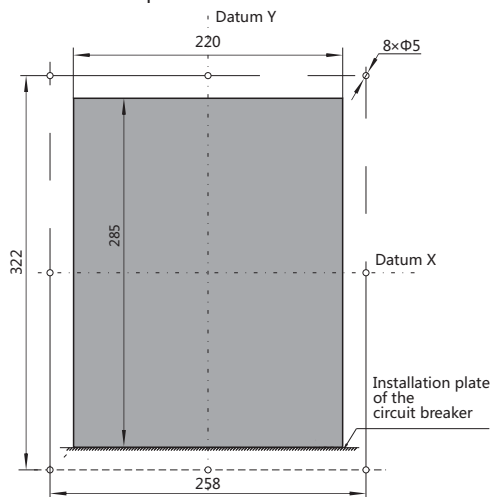


Hole size of the panel of the fixed type circuit breaker

Horizontal connection

Side view

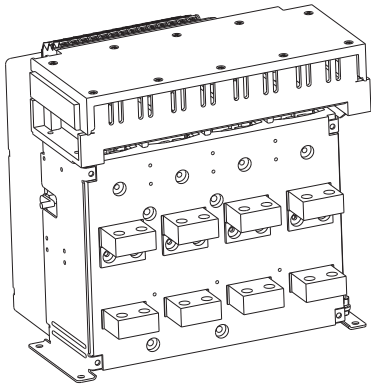


Busbar size and busbar interval

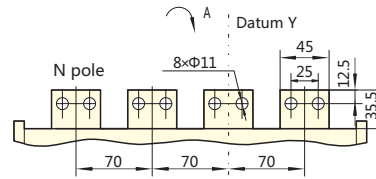


1600A draw-out type

Front view

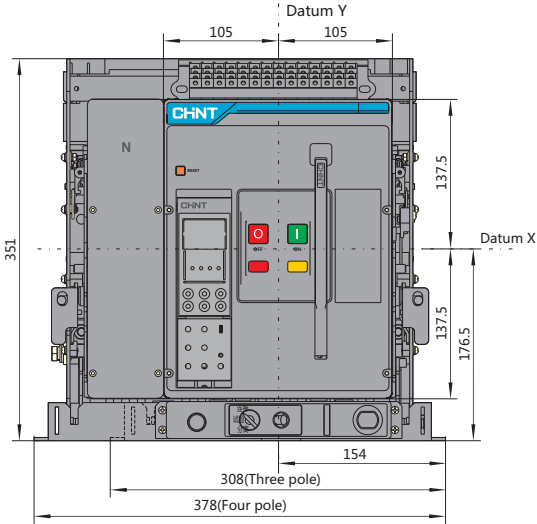


Side view

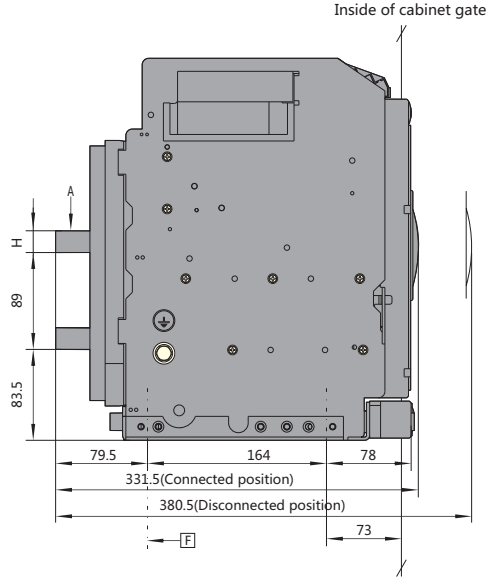

Hole size


Hole size of the base

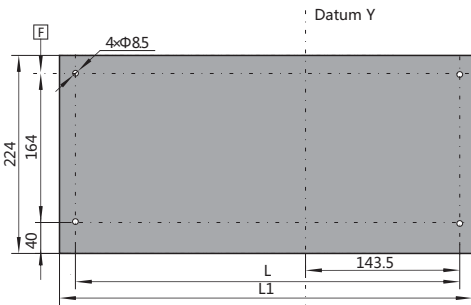

Schematic diagram of the overall size of the bottom surface and the installation hole pitch

H	L	L1	Remark
5	287	308	In=400A~630A Three pole
8	287	308	In=800A~1250A Three pole
20	287	308	In=1600A Three pole
5	357	378	In=400A~630A Four pole
8	357	378	In=800A~1250A Four pole
20	357	378	In=1600A Four pole

Hole size of a panel

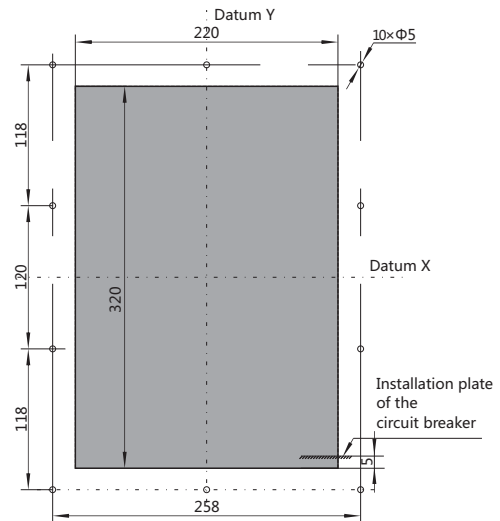


Ratio: 1:1.5 Hole size of a panel of the draw-out type circuit breaker


Horizontal connection

---

Side view

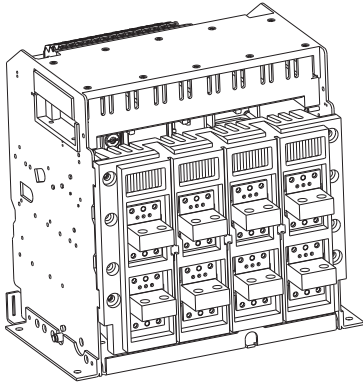


Busbar size and interval

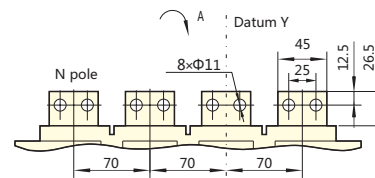


2000A fixed type

Front view

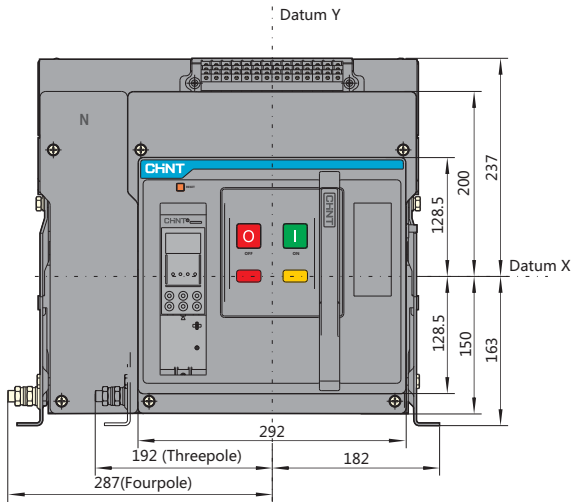


Side view

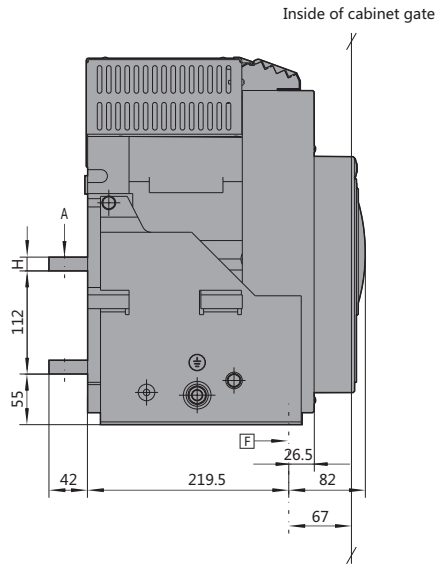


Hole size

Hole size of the base

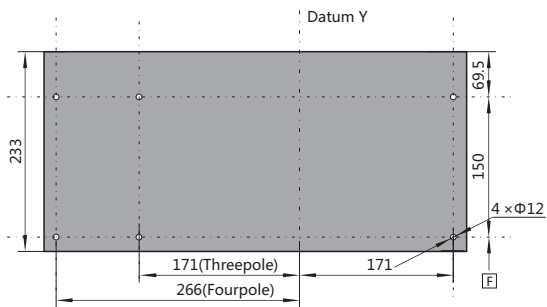

Schematic diagram of the overall size of the bottom surface and the installation hole pitch

Hole size of a panel

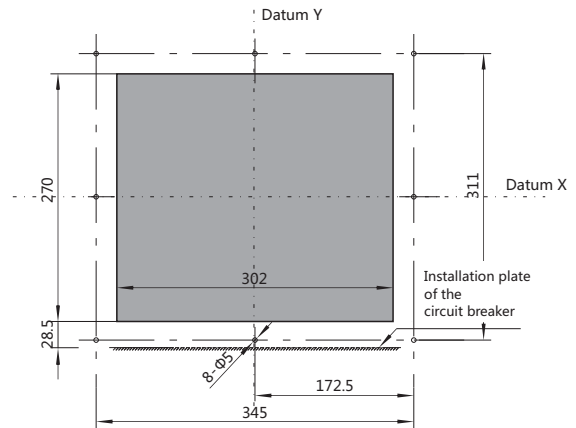


Hole of the panel

H	Remark
10	In=630A
15	In=800A~1600A
20	In=2000A


Horizontal connection

---

Side view

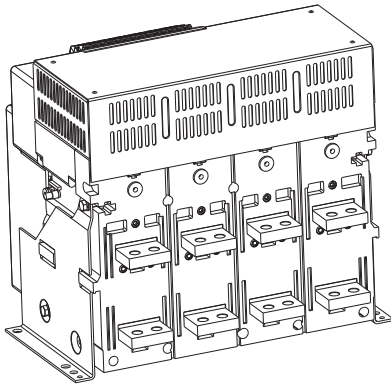


Busbar size and interval

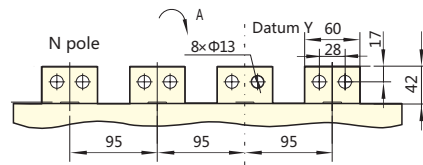


2000A draw-out type

Front view

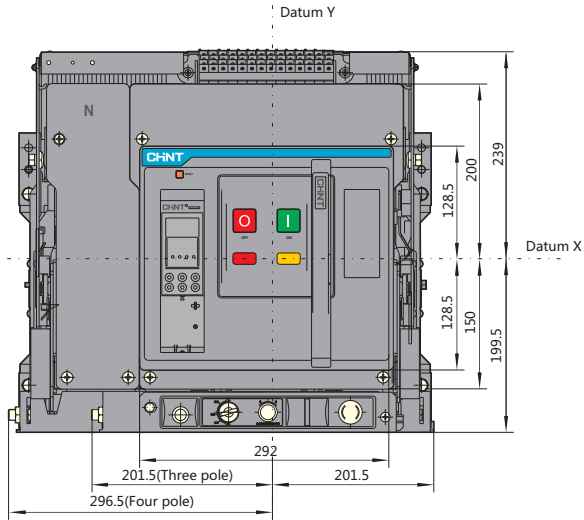


Side view

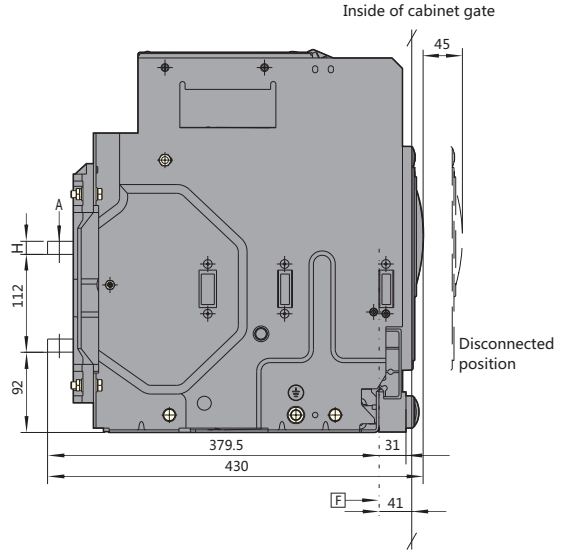


Hole size

Hole size of the base

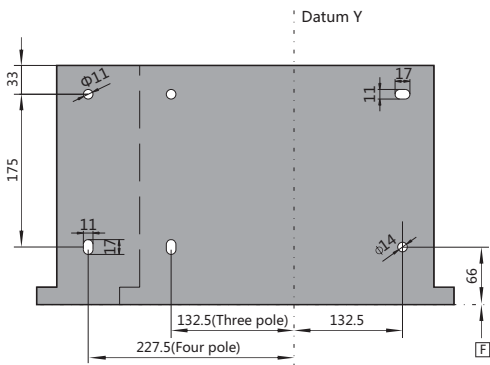

Schematic diagram of the overall size of the bottom surface and the installation hole pitch

Hole size of a panel

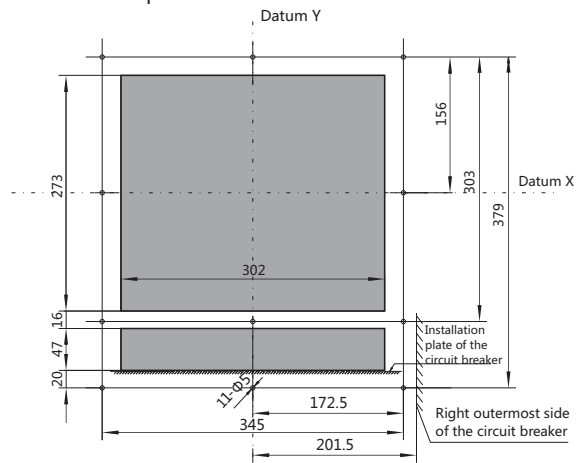


Hole of the panel

H	Remark
10	In=630A
15	In=800A~1600A
20	In=2000A


Horizontal connection

---

Side view

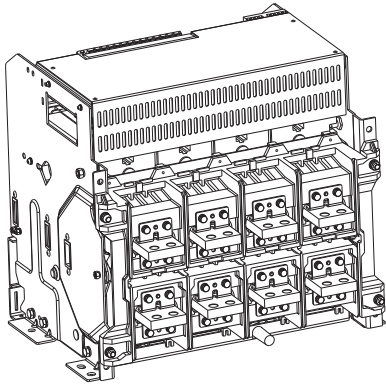


Busbar size and interval

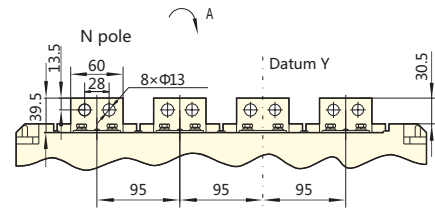




3200A fixed type

Front view

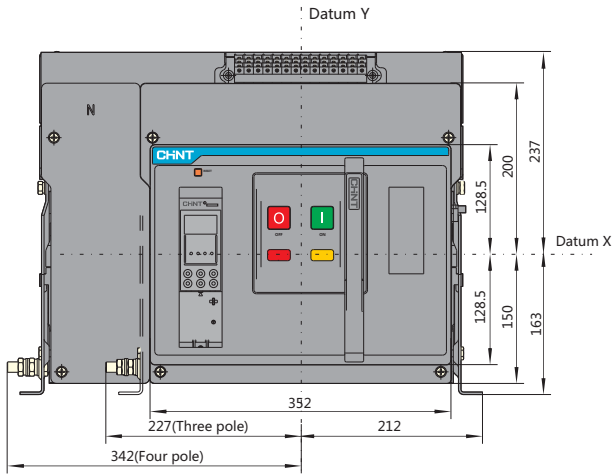


Side view

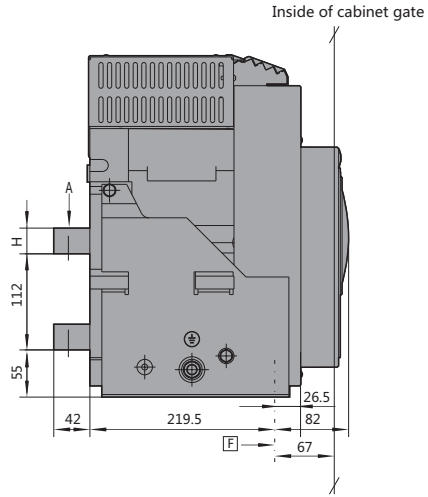


Hole size

Hole size of the base

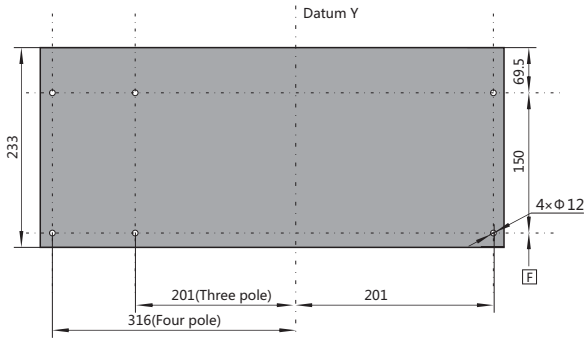

Schematic diagram of the overall size of the bottom surface and the installation hole pitch

Hole of the panel

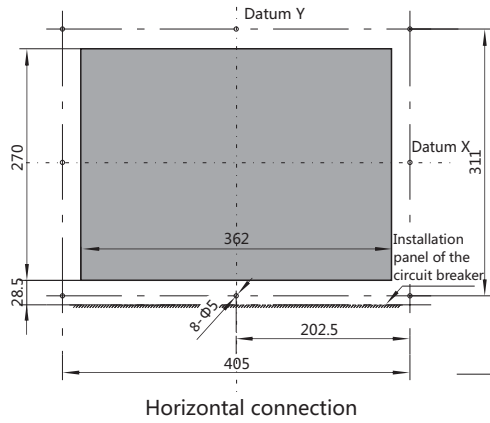


Horizontal connection



H	Remark
20	In=1600A~2500A
30	In=3200A

Horizontal connection

Side view

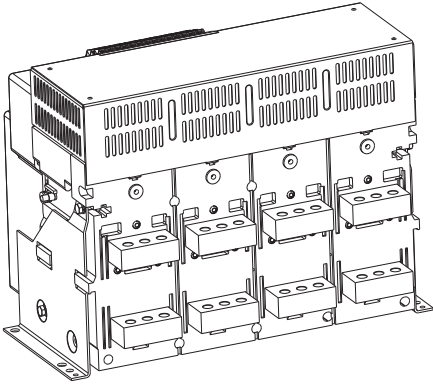


Busbar size and interval

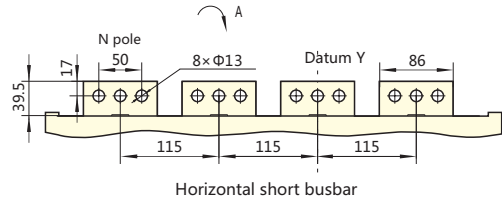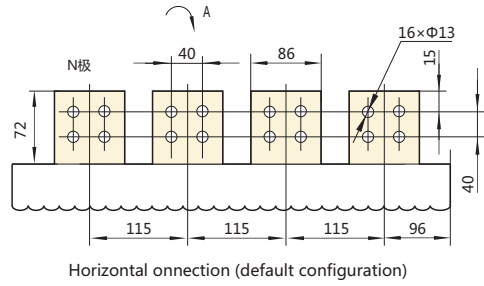


3200A draw-out type(Default configuration)

Front view

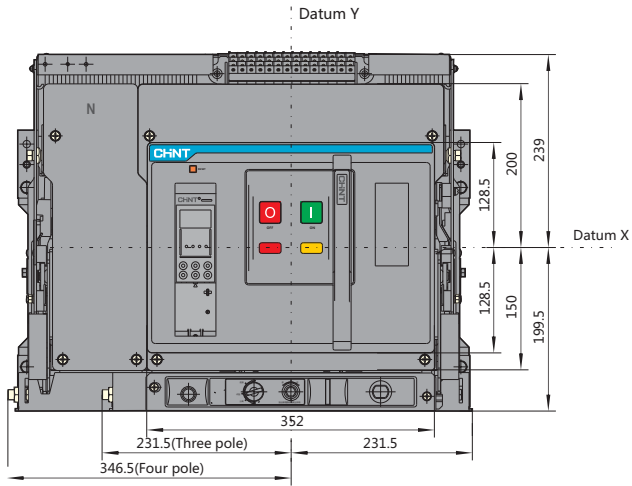


Side view

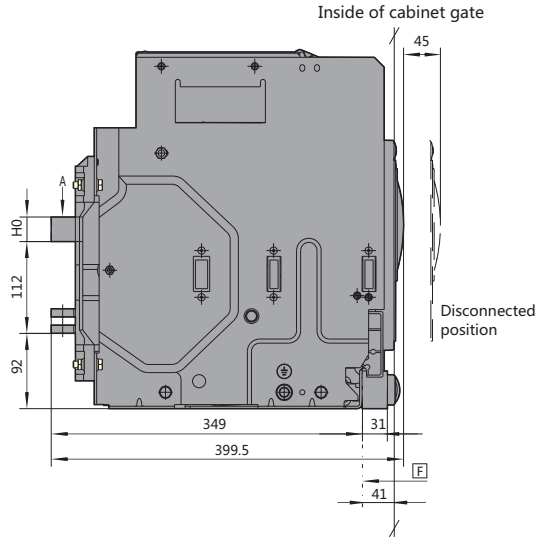


3200A draw-out type(Horizontal short busbar)

Front view

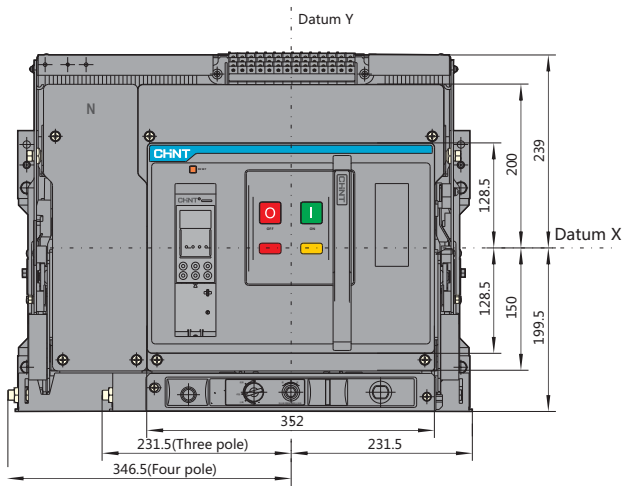


Side view

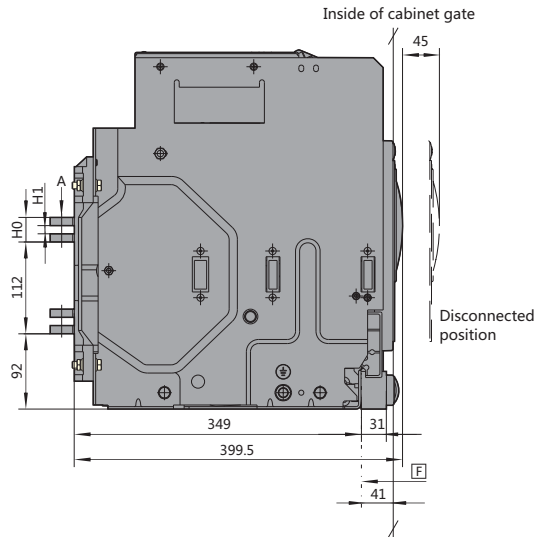

Hole size


Hole size of the base

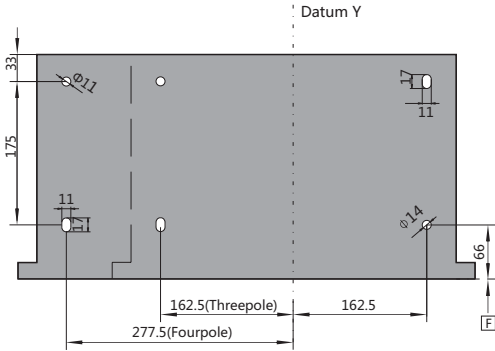

Schematic diagram of the overall size of the bottom surface and the installation hole pitch

H0	H1	Remark
20	0	In=1600A~2500A
30	$10^{+0.1}_0$	In=3200A


Hole size of a panel

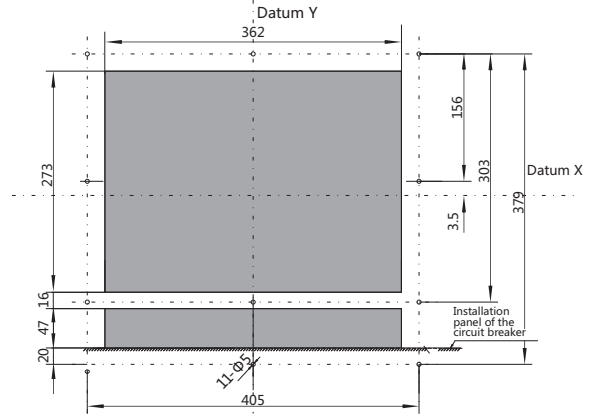




Hole of the panel

Horizontal connection

Side view

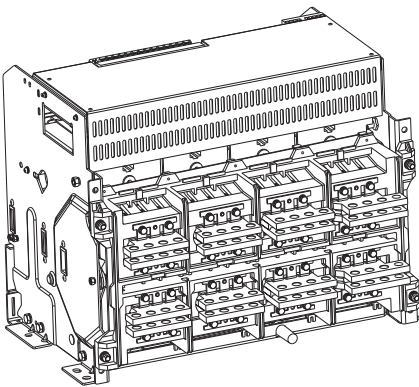


Busbar size and interval

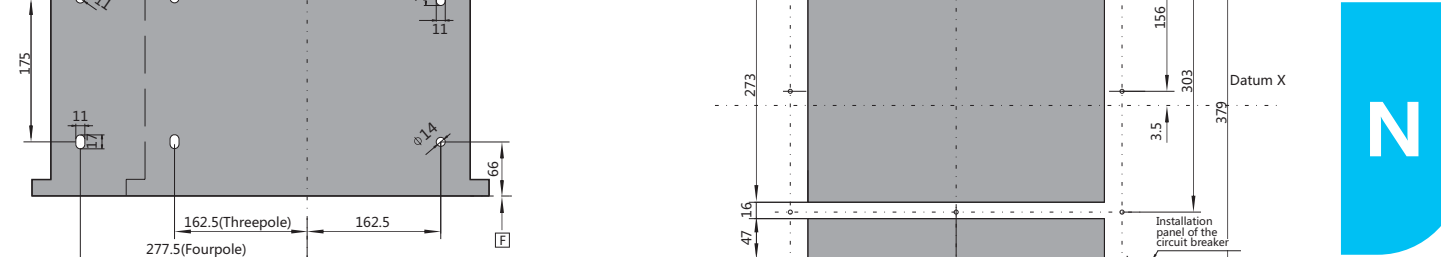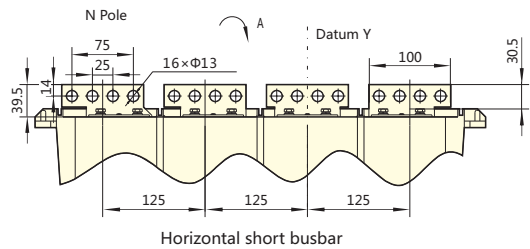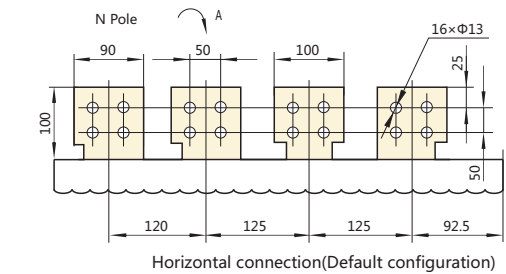


4000A fixed type

Front view

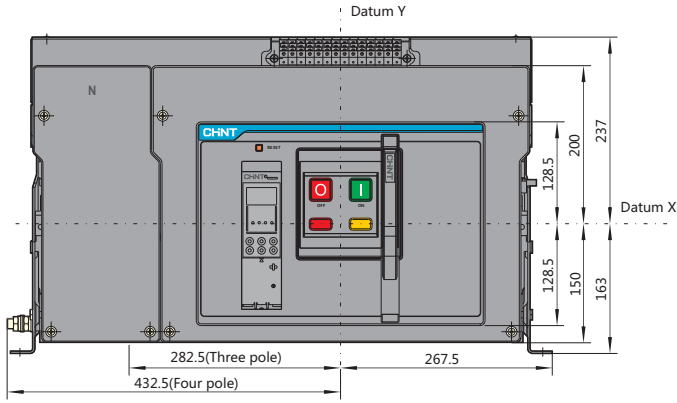


Side view

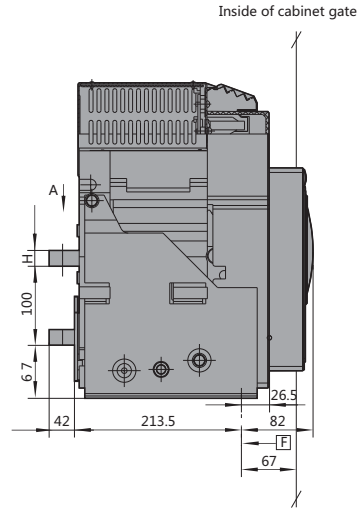


Hole size

Hole size of the base

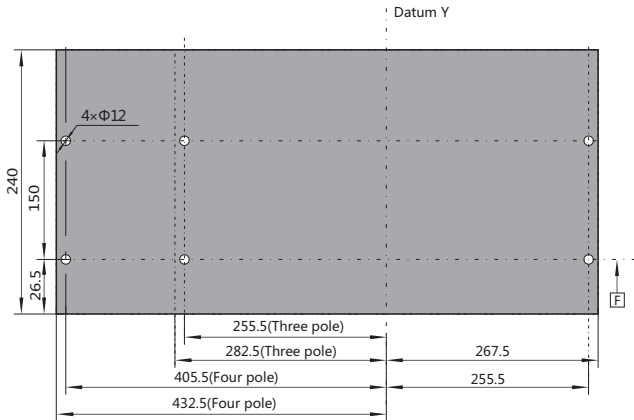

Hole size of a panel

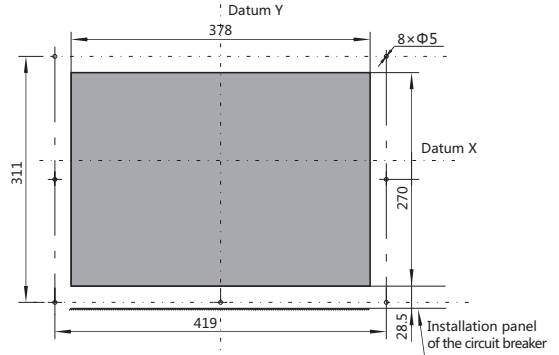

Ratio 1:2 Hole size of the panel of the fixed type circuit breaker


Schematic diagram of the overall size of the bottom surface and the installation hole pitch

H	Remark
16	In=3200A
20	In=3600A~4000A


Horizontal connection

---

Side view

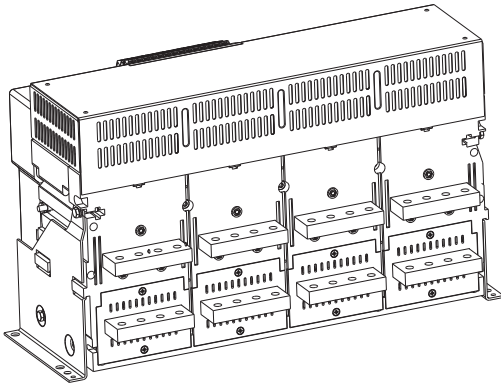


Busbar size and interval

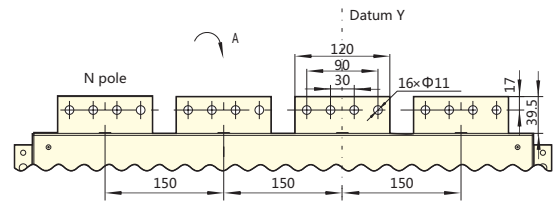


4000A draw-out type

Front view

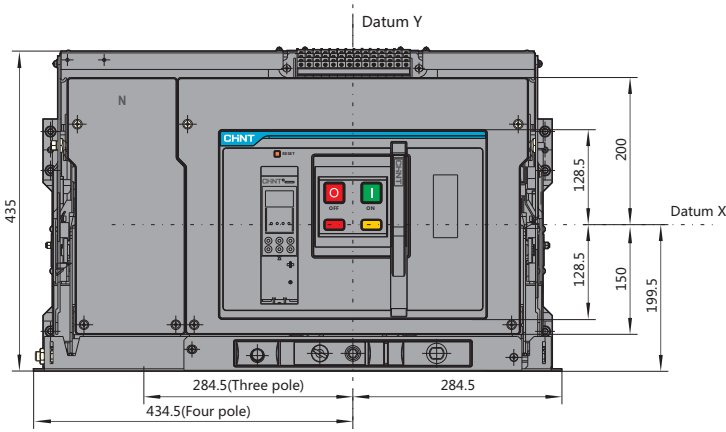


Side view

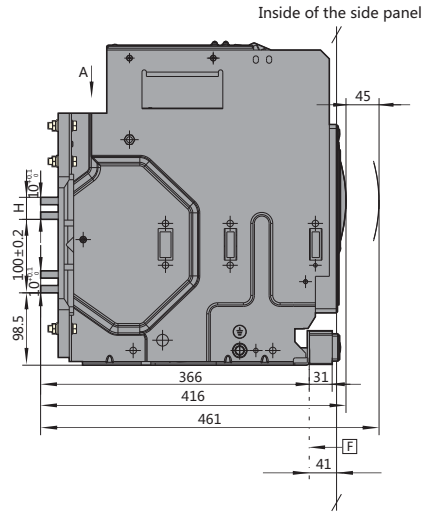


Hole size

Hole size of the base

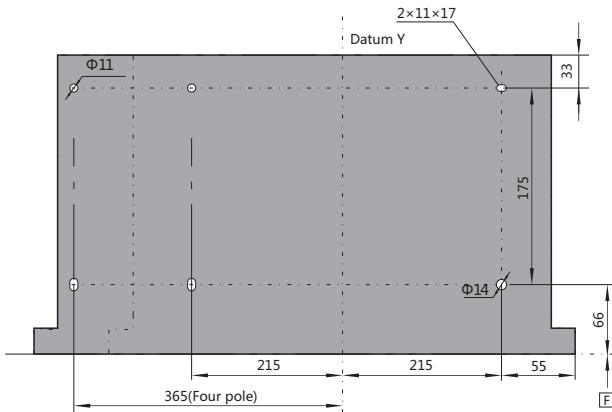

Schematic diagram of the overall size of the bottom surface and the installation hole pitch

Hole size of a panel

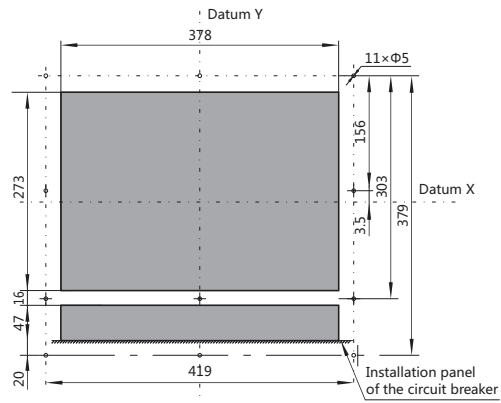


Ratio 1:1 Hole size of the panel of the draw-out type circuit breaker

H	Remark
26	In=3200A
30	In=3600~4000A


Horizontal connection

---

Side view

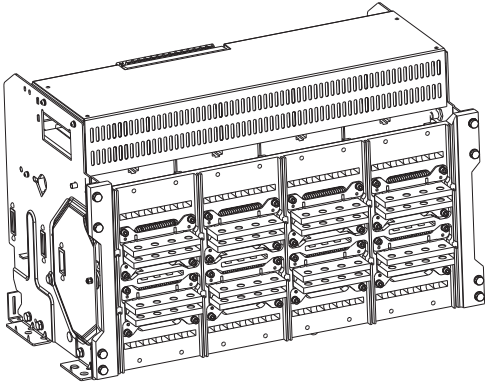

Busbar size and interval


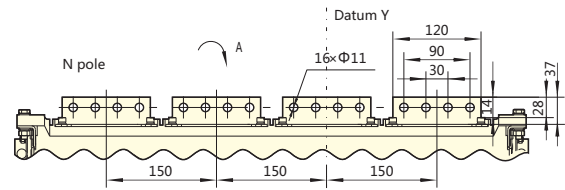




External transformer (Neutral CT) (3P+N mode)

External transformer (Neutral CT) dimension

The installation overall dimension of an external N-phase transformer is as below when the controller is of 3P+N type.  
The transformer is provided by the manufacturer. A connection copper bar and an installation support are manufactured by users.

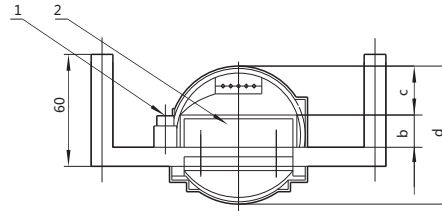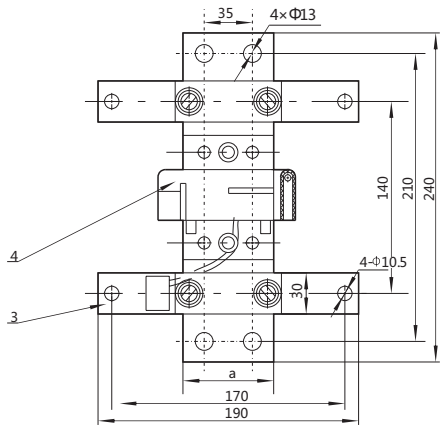


1-Wiring panel 2-Busbar 3-Fixation panel 4-Transformer

Frame size	a	b	c	d
1600	45	20	40	88
2000	60	20	34	89
3200	80	20	35	110
4000	120	20	16	58


4CT Type earth current transformer

Structural dimension of external earth current transformer (W type)

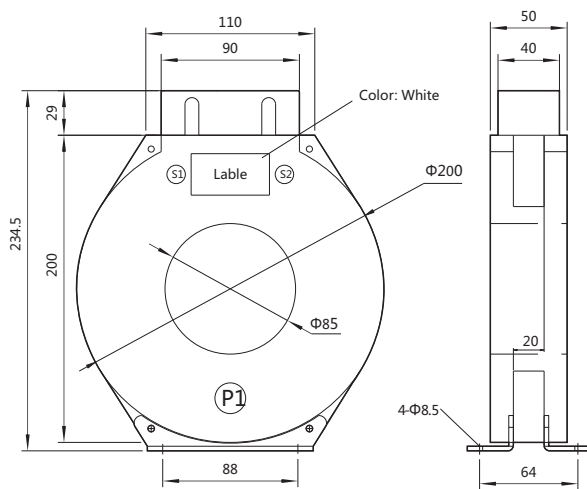

CTB-2 Type earth current transformer

Structural dimension of external earth current transformer (W type)

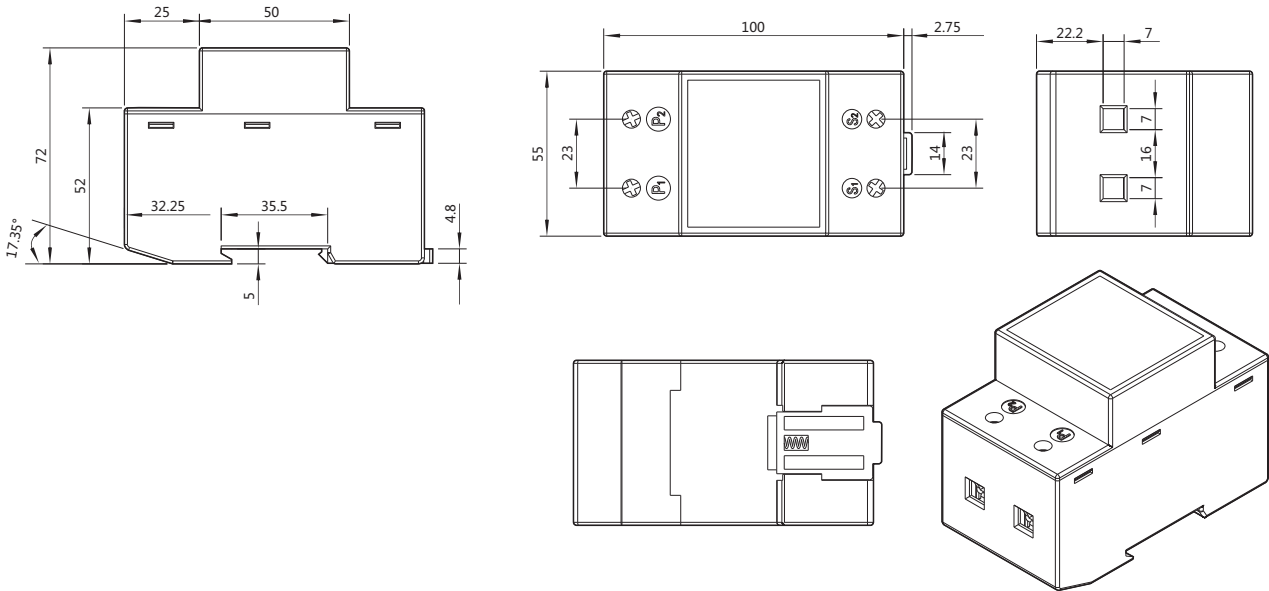

Undervoltage time delay controller


Installation overall dimension of undervoltage time-delay controller which is required to be plugged in the undervoltage time-delay tripper



# Secondary Circuit Wiring

1600A frame


M/A type control unit

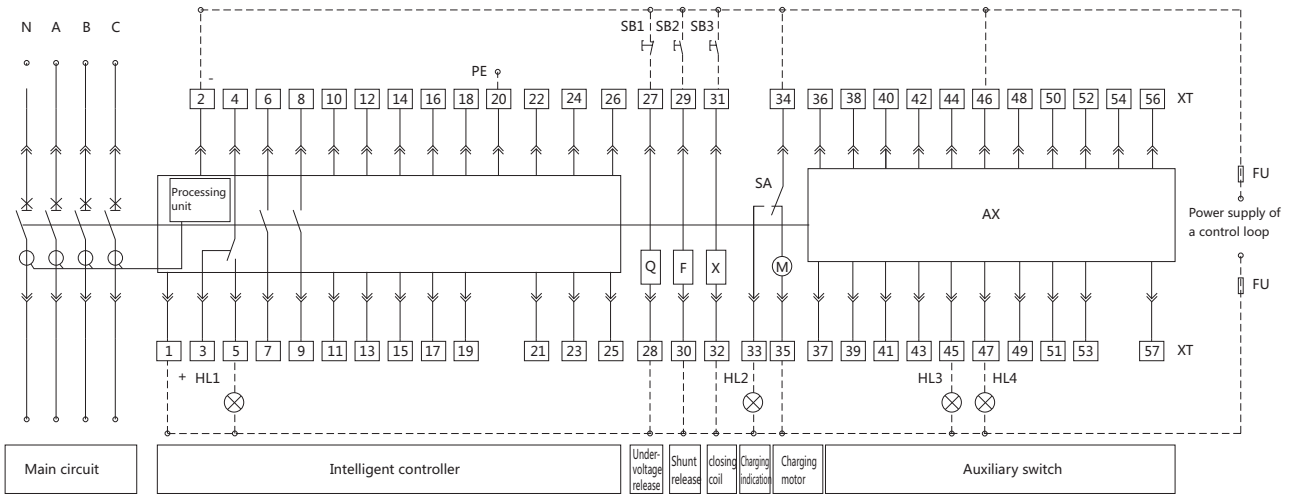


## AX auxiliary contact type

For user

Four groups of adapters (Default)

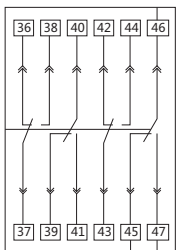

Six groups of adapters

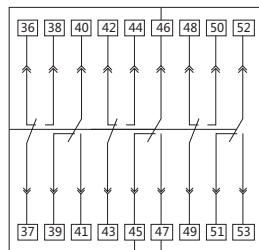


- Q-Undervoltage release    F-Shunt release    X-Closing coil
- M-Charging motor    SA-Limited    XT-Wiring terminal
- AX-Auxiliary contact    SB1-Emergency stop button
- SB2-Tripping push button    SB3-Closing push button
- HL1-Failure indication lamp    HL2-Charging indication lamp
- HL3-Tripping indication lamp    HL4-Closing indication lamp    FU-Fuse (6A)
- 1#, 2#: Power supply of intelligent controller
- 3#~5#: Tripping alarm contact (4-common point)
- 6#, 9#: Auxiliary contact, normally open contact
- 10#~11#: Empty
- 12#~19#: Empty
- 20#: PE line
- 21#~24#: Empty

- 25#~26#: External N-phase transformer input signal contacts.
- Conventional products are empty. When an external transformer is required to be attached for special order of users, they are external transformer signal input contacts.
- 27#, 28#: Undervoltage release
- 29#, 30#: Shunt release
- 31#, 32#: Closing coil
- 33#, 34#: Charging indication
- 34#, 35#: Charging motor
- 36#~56#: Auxiliary contact
- Conventional products are four groups of adapters, and six groups of adapters can be provided for special order for users.
- Note: The full line section is connected, and the dot line is connected by customers.

1600A frame


P/H type control unit

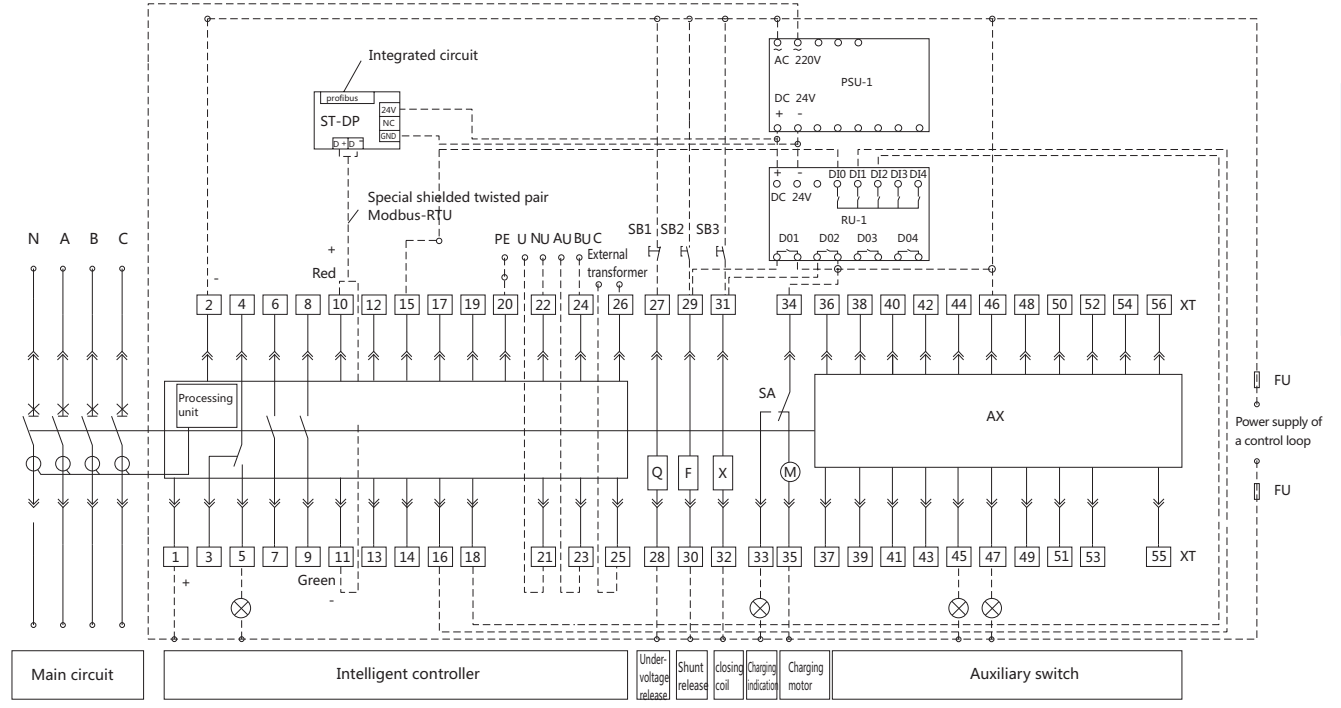


AX auxiliary contact type

For user

Four groups of adapters (Default)

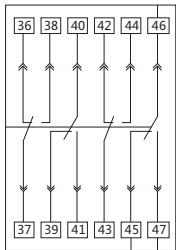

Six groups of adapters

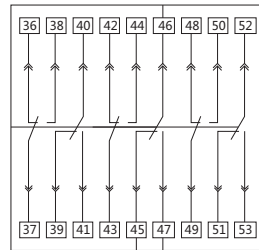

- Q-Undervoltage release F-Shunt release
- X-Closing coil M-Charging motor
- SA-Limited switch XT-Wiring terminal AX-Auxiliary contact
- SB1-Emergency stop button SB2-Tripping push button
- SB3-Closing push button HL1-Failure indication lamp
- HL2-Charging indication lamp
- HL3-Tripping indication lamp HL4-Closing indication lamp
- FU-Fuse (6A) PSU-1—power module
- 1#, 2#: Power supply of intelligent controller
- 3#~5#: Tripping alarm contact (4-common point)
- 6#~9#: Auxiliary contact, normally open contact
- 10#~11#: Defaulted communication output contact for a H type intelligent controller. P type is empty
- 12#~19#: Four groups of programmable output contacts
- 12# : com, 18#:D01, 16#:D02, 14#D03, 13#D04

H type intelligent controller with a programmable output contact outputs in default: 12#, 13#: load 1 alarm, 12#, 14#: load 2 alarm, 12#,16#: tripping signal output, 12#, 18#: Closing signal output

P type intelligent controller with a programmable output contact outputs in default: 12#, 13#: load 1 alarm, 12#, 14#: load C alarm, 12#, 16#: self-diagnosis alarm, 12#, 18#: failure tripping. 20#: PE line.

21#~24#: voltage display input signal contact

P/H type intelligent controller 21#:N-phase voltage signal

22#: A-phase voltage signal 23#:B-phase voltage signal,

24#: C- phase voltage signal

25#~26#: External N-phase transformer or external earth current transformer input signal contacts. Conventional products are empty. When an external transformer is required for special order for users, they are external transformer signal input contacts.

27#, 28#: Undervoltage release

29#, 30#: Shunt release

31#, 32#: Closing coil

33#, 34#: Charging indication

34#, 35#: Charging motor

36#~56#: Auxiliary contact

Conventional products are four groups of adapters, and six groups of adapters can be provided for special order for users.


ST-DP: DP protocol module. When the upper computer communication protocol is Modbus-RTU, the ST-DP protocol module is not required. When the upper computer communication protocol is Profibus-DP, the Modbus-RTU protocol module is required to be converted into Profibus-DP protocol by the ST-DP protocol module, extra fee needed.

RU-1: relay module. The circuit breaker is used for tripping and switching via remote control, and is used for tripping and switching signal energy amplification, extra fee needed.

Note: The full line section is connected, and the dot line should be connected by customers.

2000-4000A frame


M/A type control unit

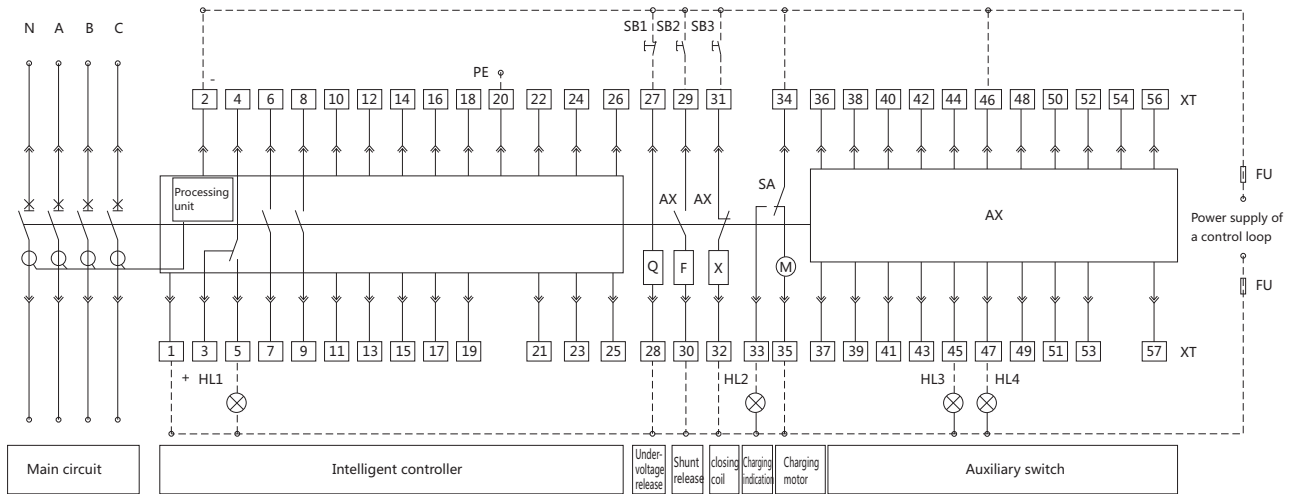


AX auxiliary contact type

For user


Four groups of adapters (Default)

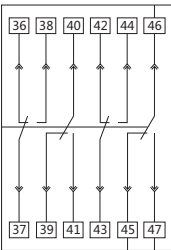


Five groups of adapters

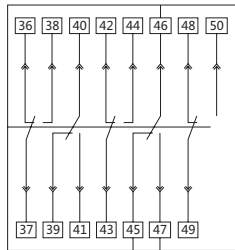


Three-open three-closed auxiliary contact

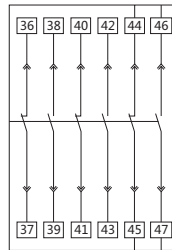


Four-open four-closed auxiliary contact

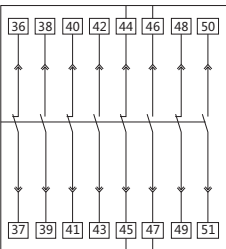

Five-open five-closed auxiliary contact

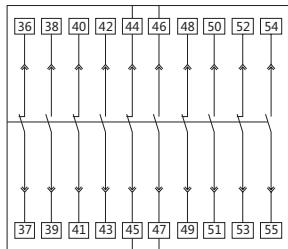

Six-open Six-closed auxiliary contact

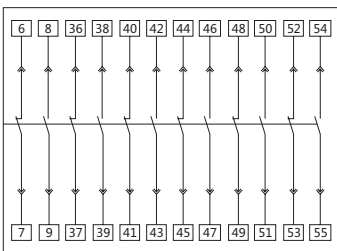

Q-Undervoltage release F-Shunt release X-Closing coil  
 M-Charging motor SA-Limited switch XT-Wiring terminal  
 AX-Auxiliary contact SB1-Emergency stop button  
 SB2-Tripping push button SB3-Closing push button  
 HL1-Failure indication lamp HL2-Charging indication lamp  
 HL3-Tripping indication lamp  
 HL4-Closing indication lamp FU-Fuse (6A)

1#, 2#: Power supply of intelligent controller  
 3#~5#: Tripping alarm contact (4-common point)  
 6#~9#: Auxiliary contact, normally open contact  
 10#~11#: Empty  
 12#~19#: Empty  
 20#: PE line  
 21#~24#: Empty  
 25#~26#: External N-phase input signal contacts.

Conventional products are empty. When an external transformer is required to be attached for special order of users, they are external transformer signal input contacts.

27#, 28#: Undervoltage release  
 29#, 30#: Shunt release  
 31#, 32#: Closing coil  
 33#, 34#: Charging indication  
 34#, 35#: Charging motor  
 36#~56#: Auxiliary contact

Conventional products are four groups of adapters.


The three-open three-closed auxiliary contact, the four-open four-closed auxiliary contact, the five-open five-closed auxiliary contact, and five groups of adapters can be provided for the special order for users.

Note: 1. the full line section is connected, and the dot line should be connected by customers.

Note: 2. when the voltages of the controller of the 2000-4000 frame are AC 230V/AC 400V, the controller can be directly connected to 1#, 2# terminals. When the voltage is DC 220V/DC 110V, the controller can be connected to 1#, 2# terminals after the power supply module outputs DC 24V.

2000-4000A frame


P/H type control unit

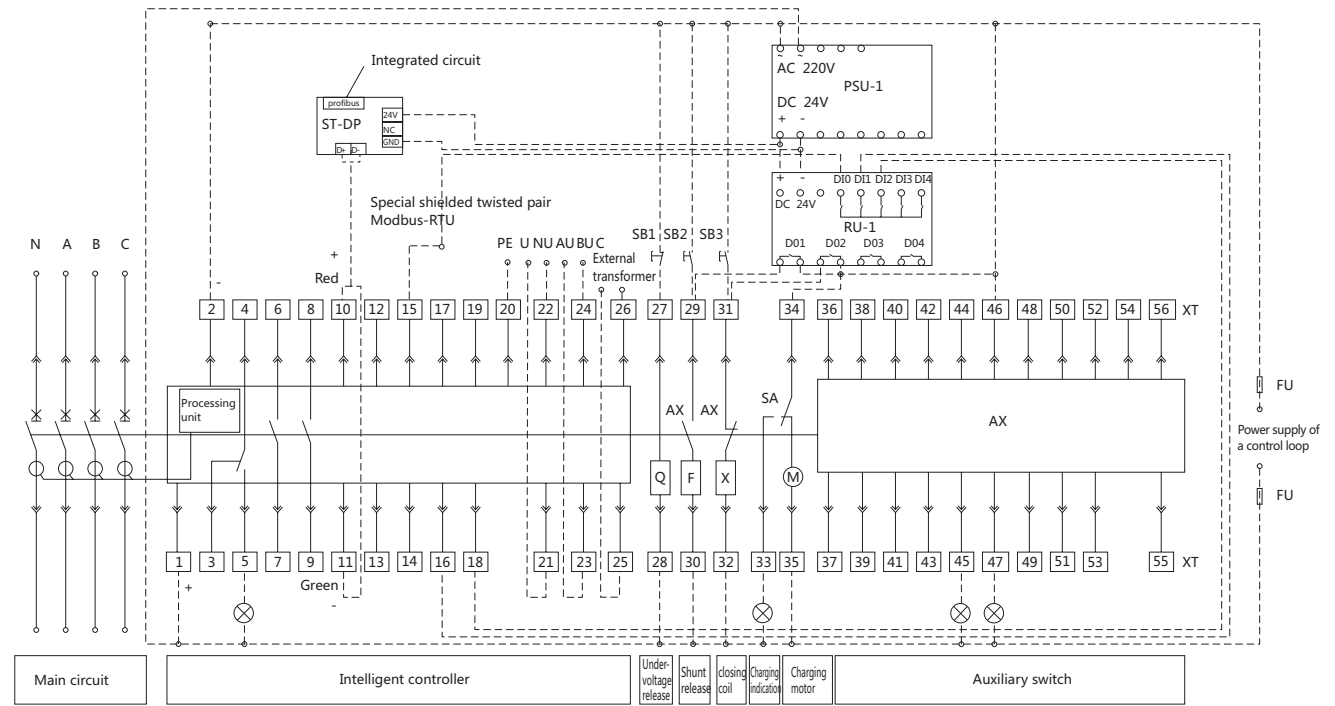


AX auxiliary contact type

For user

Four groups of adapters (Default) Five groups of adapters Three-open three-closed auxiliary contact

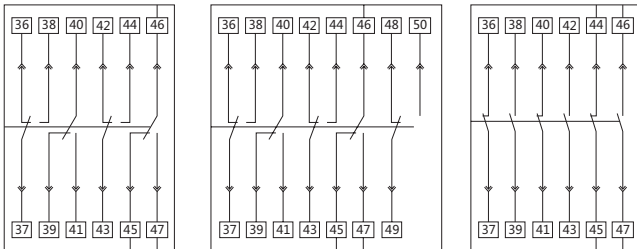

Four-open four-closed auxiliary contact Five-open five-closed auxiliary contact

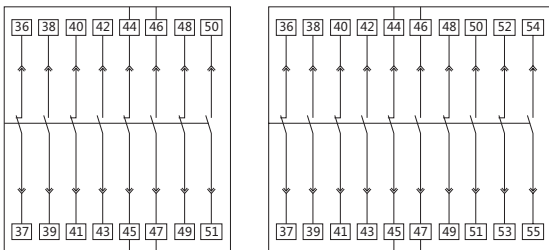

21#~24#: voltage display input signal contact

P/H type intelligent controller

21#: N-phase voltage signal, 22#: A-phase voltage signal

23#: B-phase voltage signal, 24#: C-phase voltage signal

25#~26#: External N-phase transformer or external earthing current transformer input signal contacts.

Conventional products are empty. When an external transformer is required for special order for users, they are external transformer signal input contacts.

27#, 28#: Undervoltage release, 29#, 30#: Shunt release

31#, 32#: Closing coil, 33#, 34#: Charging indication

34#, 35#: Charging motor

36#~56#: Auxiliary contact

- Q-Undervoltage release F-Shunt release X-Closing coil
- M-Charging motor SA-Limited switch XT-Wiring terminal
- AX-Auxiliary contact SB1-Emergency stop button SB2-Tripping push button
- SB3-Closing push button HL1-Failure indication lamp
- HL2-Charging indication lamp HL3-Tripping indication lamp
- HL4-Closing indication lamp FU-Fuse (6A) PSU-1—power module
- 1#, 2#: Power supply of intelligent controller
- 3#~5#: Tripping alarm contact (4-common point)
- 6#~9#: Auxiliary contact, normally open contact
- 10#~11#: Defaulted communication output contact for a H type intelligent controller.
- P type is empty
- 12#~19#: Four groups of programmable output contacts
- 12# : com, 18 #:D01,16 #:D02,14 #D03,13 #D04
- H type intelligent controller with a programmable output contact outputs in default: 12#, 13#: load 1 alarm, 12#, 14#: load 2 alarm, 12#,16#: tripping signal output, 12#, 18#: switching signal output.
- P type intelligent controller with a programmable output contact outputs in default: 12#, 13#: load 1 alarm, 12#, 14#: load C alarm, 12#,16#: self-diagnosis alarm, 12#, 18#: failure tripping.
- 20#: PE line.

Conventional products are four groups of adapters. The three-open three-closed auxiliary contact, the four-open four-closed auxiliary contact, the five-open five-closed auxiliary contact, and five groups of adapters can be provided for the special order for users.

ST-DP: DP protocol module. When the upper computer communication protocol is Modbus-RTU, the ST-DP protocol module is not required. When the upper computer communication protocol is Profibus-DP, the Modbus-RTU protocol module is required to be converted into Profibus-DP protocol by the ST-DP protocol module, extra fee needed.

RU-1: relay module. The circuit breaker is used for breaking and making via remote control, and is used for breaking and making signal energy amplification, extra fee needed.


Note: 1. the full line section is connected, and the dot line should be connected by customers.

Note: 2. when the voltages of the controller of the 2000-4000 frame are AC 230V/AC 400V, the controller can be directly connected to 1#, 2#terminals. When the voltage is DC 220V/DC 110V, the controller can be connected to 1#, 2# terminals after the power supply module outputs DC 24V.



Chassis position indicator device

Wiring diagram

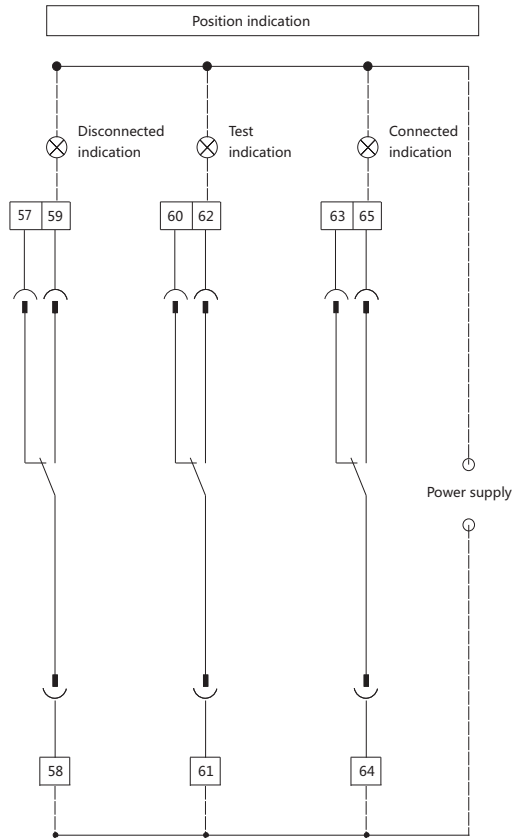

Operation requirements:

1. The chassis indication device can indicate the positions including "disconnected", "test" and "connected" which are completely or partially used according to the requirements of order.
2. When the body of the draw-out type circuit breaker is pushed from the "disconnected" position to the "test" position, 57# and 58# terminals should be transferred from connection into disconnection, and 58# and 59# terminals should be transferred from disconnection to connection.
3. When the body of the draw-out type circuit breaker is pushed from the "disconnected" position to the "test" position, 60# and 61# terminals should be transferred from connection into disconnection, and 61# and 62# terminals should be transferred from disconnection to connection. There is sufficient safety distance between the bus of the circuit breaker body and a bridge-type contact of the safety shutter, and tripping and switching operation can be carried out reliably.
4. When the body of the draw-out type circuit breaker is switched from the "test" position to the "connected" position, NXA16 type secondary circuit has no clearance. The NXA20-40 type safety shutter swing continuously after sending out the "cracking" sound, and the safety shutter jiggle handle rotates within 15 circles. 63# and 64# terminals are being transferred from connection to disconnection. 64# and 65# terminals are transferred from disconnection to connection. The busbar of circuit breaker body is required to be reliably inserted into the bridge-type contact of the chassis base, and reliably bear the main circuit current to operate.
5. When the body of the draw-out type circuit breaker is pushed from the "connected" position to the "test" position, 60# and 61# terminals should be transferred from connection into disconnection, and 61# and 62# terminals should be transferred from disconnection to connection. There is sufficient safety distance between the busbar of the circuit breaker body and a bridge-type contact of the chassis, and tripping and switching operation can be carried out reliably.
6. When the body of the draw-out type circuit breaker swings from the "test" position to the "disconnected" position, 57# and 58# terminals should be transferred from connection to disconnection, and 58# and 59# terminals should be transferred from disconnection to connection, and at the same time, the circuit breaker body still cannot be drawn out, and needs to swing toward the "disconnected" position until the handle cannot swing any more, and meanwhile, the circuit breaker body can be drawn out. After the circuit breaker is pulled out, 57# and 58# terminals should be transferred from disconnection to connection, and 58# and 59# terminals should be transferred from connection to disconnection.
7. In the position transfer operation process of the chassis, the operation can only be stopped when the indicator points to "disconnected", "test" and "connected" or the position indicator cannot display the position of the circuit breaker body in the chassis correctly.



LSI curves

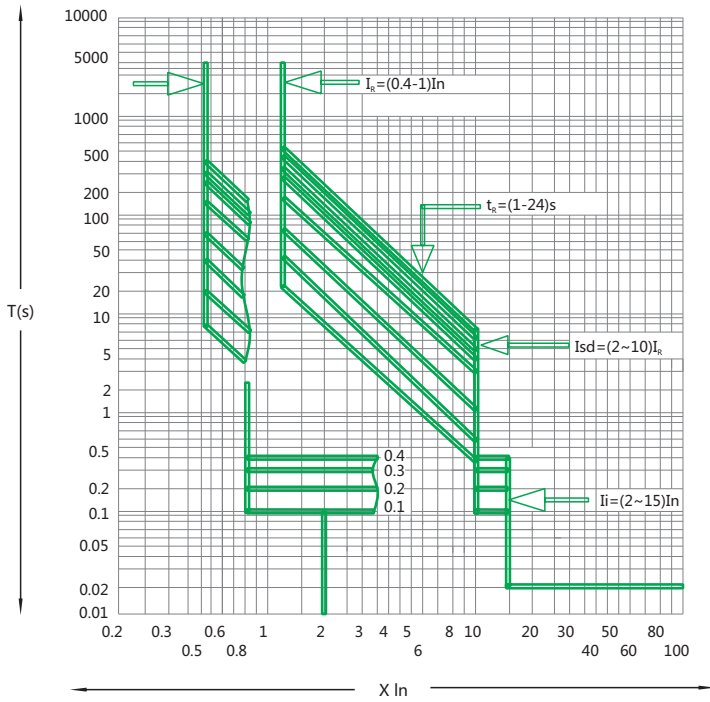


Fig.1 Overcurrent protection curves

Earth fault protection curves

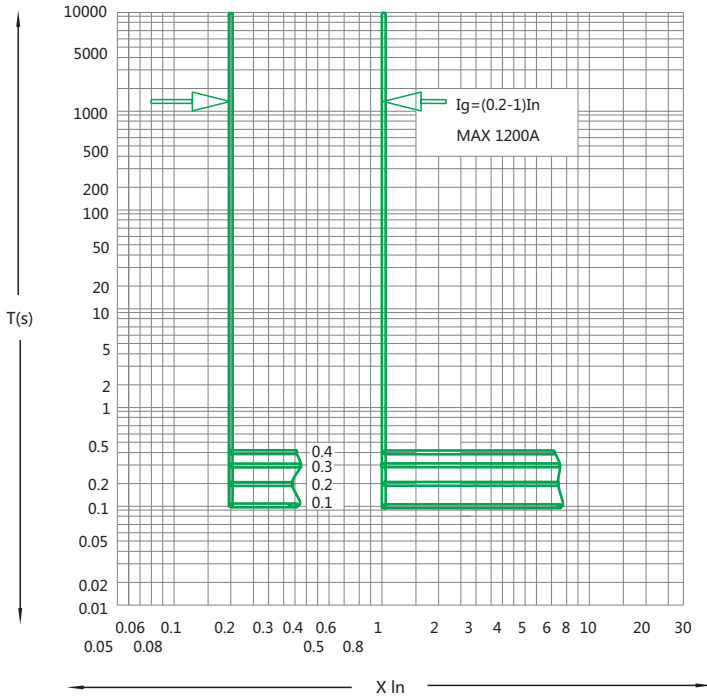


Fig.2 Asymmetrical earth fault protection curves






Frame size	1600A			2000A			3200A			4000A		
Circuit breaker	N <input type="checkbox"/>	S <input type="checkbox"/>	H <input type="checkbox"/>	N <input type="checkbox"/>	S <input type="checkbox"/>	H <input type="checkbox"/>	N <input type="checkbox"/>	S <input type="checkbox"/>	H <input type="checkbox"/>	N <input type="checkbox"/>	S <input type="checkbox"/>	H <input type="checkbox"/>
Rated current	400A <input type="checkbox"/>			630A <input type="checkbox"/>			1600A <input type="checkbox"/>			3200A <input type="checkbox"/>		
	630A <input type="checkbox"/>			800A <input type="checkbox"/>			2000A <input type="checkbox"/>			3600A <input type="checkbox"/>		
	800A <input type="checkbox"/>			1000A <input type="checkbox"/>			2500A <input type="checkbox"/>			4000A <input type="checkbox"/>		
	1000A <input type="checkbox"/>			1250A <input type="checkbox"/>			3200A <input type="checkbox"/>					
	1250A <input type="checkbox"/>			1600A <input type="checkbox"/>								
Number of poles	3 pole <input type="checkbox"/>			4 pole <input type="checkbox"/>								
Installation modes	Horizontal draw-out <input type="checkbox"/>						Fixed and horizontal <input type="checkbox"/>					
Intelligent controller	M type <input type="checkbox"/>		A type <input type="checkbox"/>		P type <input type="checkbox"/>		PT type <input type="checkbox"/>		H type <input type="checkbox"/>		HT type <input type="checkbox"/>	
Shunt release and motor operation	Closing coil <input type="checkbox"/>						Shunt release <input type="checkbox"/>					
	AC220/230/240V <input type="checkbox"/>			AC380/400/415V <input type="checkbox"/>			DC110V <input type="checkbox"/>		DC220V <input type="checkbox"/>			
Undervoltage release (Match)	UVT <input type="checkbox"/>						UVTD <input type="checkbox"/>					
	AC220/230/240V <input type="checkbox"/>			AC380/400/415V <input type="checkbox"/>								
Auxiliary contact indication	Disconnected position <input type="checkbox"/>			Test position <input type="checkbox"/>			Connected position <input type="checkbox"/>					
Connection accessories	Interphase barrise <input type="checkbox"/>											
Controller accessories (Match)	External transformer: Earth current transformer <input type="checkbox"/>						External transformer (Neutral CT) <input type="checkbox"/>					
	Note: <sup>1</sup> Neutral CT is only applicable to 3P+N <sup>2</sup> The earth current transformer should be selected when customers select earth current return type earthing protection.											
Lock mechanism (Match)	Pushbutton lock <input type="checkbox"/>		Safety shutters padlock <input type="checkbox"/>				Body lock <input type="checkbox"/>		One-lock one-key <input type="checkbox"/>		Two-locks one-key <input type="checkbox"/>	
	Three-locks two-keys <input type="checkbox"/>		"Disconnected" position padlock <input type="checkbox"/>				Door interlock (Body) <input type="checkbox"/>		Door interlock (chassis) <input type="checkbox"/>			
Mechanical interlock (Match)	1 "Normal" and 1 "Replacement" <input type="checkbox"/> 2 "Incoming" and 1 "Busbar" <input type="checkbox"/>											
Source-changeover controller (Match)	1 "Normal" and 1 "Replacement" <input type="checkbox"/> 2 "Incoming" and 1 "Busbar" <input type="checkbox"/>											




## Description Of Nxa Earth Fault Protection

### Residual current earth fault type protection


- A three-pole circuit breaker achieves earth fault protection by detecting whether the sum of three current vectors is zero via three internal current transformer.

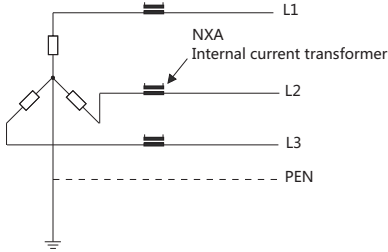

- A four-pole circuit breaker achieves earth fault protection by detecting whether the sum of three phase of current vectors and N phase of current vectors via four internal current transformer.

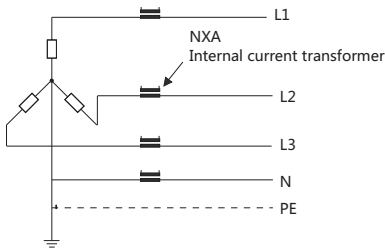

- A 3P+N system achieves vector by externally connecting an N-pole transformer to a three-pole circuit breaker and calculating the vector.

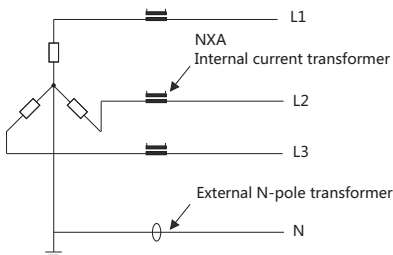

Note:

- ① The detail information of external N-pole transformer is seen in P41.
- ② The N-pole current transformer is specially configured by the company, and the default leading wire length is 2 meters.
- ③ When adopt 3PT type, ground fault protection can only apply to balance load application, if it is imbalance load, the ground fault function should be closed or setting value must be upper on imbalance current, or the intelligent controller will misoperate.
- ④ When adopt (3P+N)T type, the maximon distance between transformer and circuit breaker should be within 5 meters. The loading wire of transformer exceed 2 meters should sepciatly noted when order.

- Fig.1 displays a fault at the load side of the NXA circuit breaker. The fault current only flows through one phase. If the sum of three phase of current vectors detected by four current transformers is higher than the set threshold value, an intelligent control unit will activate the difference type earth fault protection function. The type of earth fault protection achieves the earth fault protection at the load side.

Secondary side of a transformer

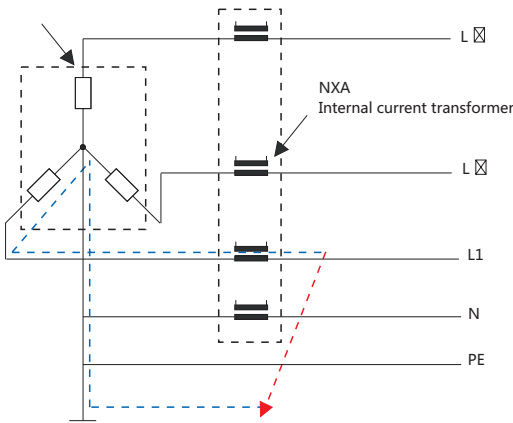



Fig.1




### Earth current type earth fault protection

Earth fault protection is realized at a star-shaped central point of the transformer by an earth transformer

An earth transformer can be configured on a central conductor of a star-shaped contact of the transformer under the condition that the circuit breaker protects a medium/low-voltage transformer. P/H type controller is required to be configured on the circuit breaker, and an external earth transformer is selected. The earth transformer can detect the earth fault current at the power supply side and the load side of the NXA circuit breaker. As shown below:

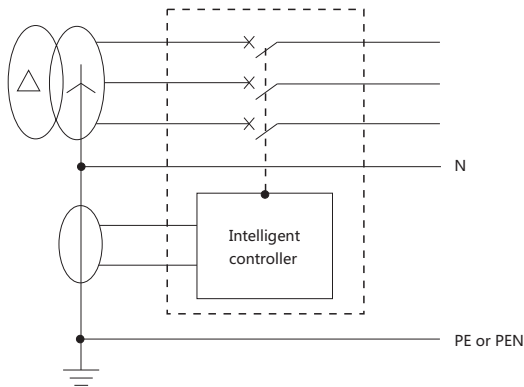


As shown below, the earth fault at the power supply side of the NXA circuit breaker can be examined by installing an external earth current transformer, and meanwhile, the earth fault at the load side of the NXA circuit breaker also can be detected.

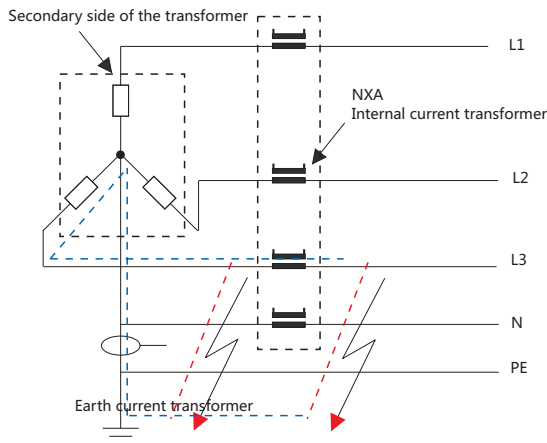

### Dual earth fault protection


NXA P/H type controller has a unique feature: the installation of two independent earth fault protection curves is permissible, so that two kinds of configurations can be managed at the same time. The release can differentiate unlimited regional earth faults because of the feature to command the NXA circuit breaker to trip and the limited regional earth fault to command the medium-voltage circuit breaker to strip.

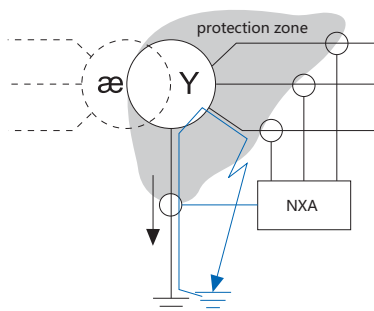

# Functions of the controller

## 2A type display and operation

CD-1: A 2A type source-changeover system is used for the switch between power grids or between the power grid and generator. When a normal power supply does not supply power normally, such as undervoltage, overvoltage, phase breaking, a spare power supply is switched for supplying power. A mechanical interlock component is configured according to standard.

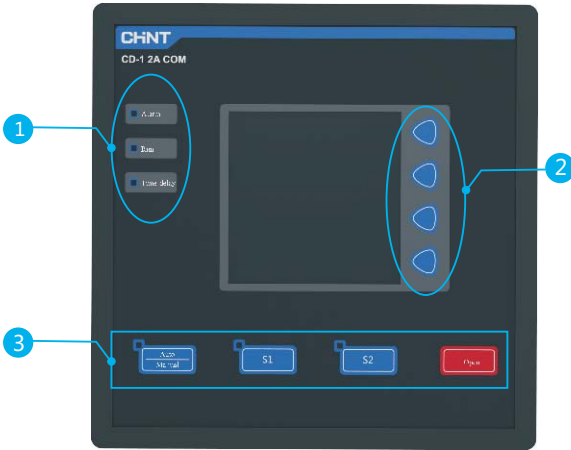

Switch operation zone	Automatic (The system judges the operation automatically, and the light is on when pressing the left upper part)
	Manual (The mechanism is operated by a handle or with buttons S1, S2 and OFF operation)
	S1: load is powered by switching to S1, and the light is on when pressing S1 in the left upper part.
	S2: load is powered by switching to S2, and the light is on when pressing S2 in the left upper part.
	Disconnection: S1, S2 are stripped, and the system load is not powered
Pressing anyone of buttons S1, S2 and OFF under the automatic condition, the system becomes manual, and corresponding operation is carried out when pressing corresponding buttons.	

## 2A type of functions

The controller has the following functions


1. Dual-circuit voltage detection display
2. Overvoltage threshold value adjustment: 400V-480V
3. Undervoltage threshold value adjustment: 280V-360V
4. Adjustment of T1, T2, T3 and T4: 0.5-64S with the step size of 0.5S
5. Undervoltage and overvoltage fault indication
6. Power supply fault indication
7. State indication of the circuit breaker
8. Self-input and self-reset or self-input and self-reset selection
9. Manual or automatic selection
10. Comprehensive alarm for transfer failure (fault of the circuit breaker, sending fault of control signals and unmet transfer conditions)
11. All primary adjustment states after resetting and before defaulting
12. Alarm contact
13. Unloading contact
14. Startup contact of a power generator
15. Standard configuration
16. Mechanical interlock
17. The controller has an overvoltage protection function, and operates normally with long-term overvoltage: 130% Ue.

Truth table

S1-circuit power supply	S2-circuit power supply
1	0
0	0
0	1

### 3A type display and operation

CD-1 A 3A source-changeover system is applicable to a power supplying system with two power supplies and one buscouple. In the manual operation process, load cannot lead to power interruption, so that the safety running level and the power supplying continuity for power distribution are enhanced. The 3A automatic power supply conversion system is applied to electric places.

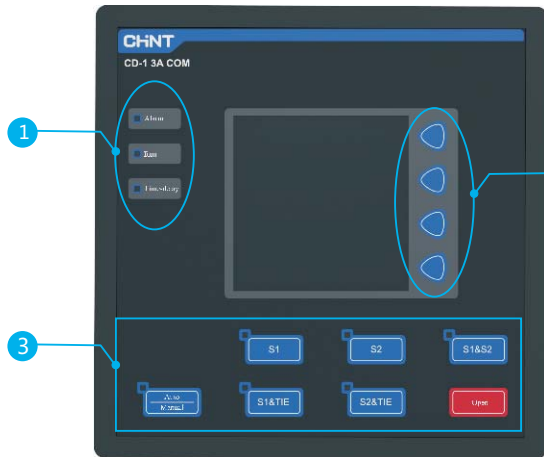

Automatic (The system judges the operation automatically, and the light is on when pressing the left upper part)
Manual (The mechanism is operated by a handle or with buttons S1, S2, S1 & S2, S1&TIE, S2&TIE and OFF operation)
S1: load is powered by switching to S1, the TIE buscouple is tripped, and the light is on at the left upper part when pressing S1.
S2: load is powered by switching to S2, the TIE buscouple is tripped, and the light is on at the left upper part when pressing S2.
S1 & S2: Load is powered by S1 & S2, TIE buscouple is tripped; the light is on at the left upper part when pressing S1 & S2.
S1&TIE: Load is powered by S1, TIE buscouple is tripped; the light is on at the left upper part when pressing S1&TIE
S2&TIE: Load is powered by S2, TIE buscouple is tripped; the light is on at the left upper part when pressing S2&TIE
Disconnection: S1,S2 and TIE are all stripped, and the system load is not powered.
Pressing anyone of buttons S1, S2 S1 & S2, S1&TIE, S2&TIE under the automatic condition, the system becomes manual, and corresponding operation is carried out when pressing corresponding buttons.

### 3A type functions

The controller has the following functions

1. Dual-circuit voltage detection display
2. Overvoltage threshold value adjustment: 400V-480V
3. Undervoltage threshold value adjustment: 280V-360V
4. Adjustment of T1, T2, T3 and T4: 0.5-64S with the step size of 0.5S
5. Undervoltage and overvoltage fault indication
6. Power supply fault indication
7. State indication of the circuit breaker
8. Self-input and self-reset or self-input and self-reset selection
9. Manual or automatic selection
10. Comprehensive alarm for transfer failure (fault of the circuit breaker, sending fault of control signals and unmet transfer conditions)
11. All primary adjustment states after resetting and before defaulting
12. Alarm contact
13. Unloading function
14. Standard configuration
15. Mechanical interlock
16. The controller has an overvoltage protection function, and operates normally with long-term overvoltage: 130% Ue.

Truth table

S1-circuit power supply	TIE buscouple	S2-circuit power supply
1	0	1
1	1	0
0	1	1
1	0	0
0	0	1
0	0	0